



This guide shows how to update firmware of MSI docking station gen 2 :

! Before starting...



- Please disable any antivirus software in Windows Security.
- Connect the Docking Station Gen 2 to **MSI notebook**.
- Connect the Docking to an external monitor.
- Keep **the AC power for** both notebook and Docking Station Gen 2 **during the update process.**

Start to install :

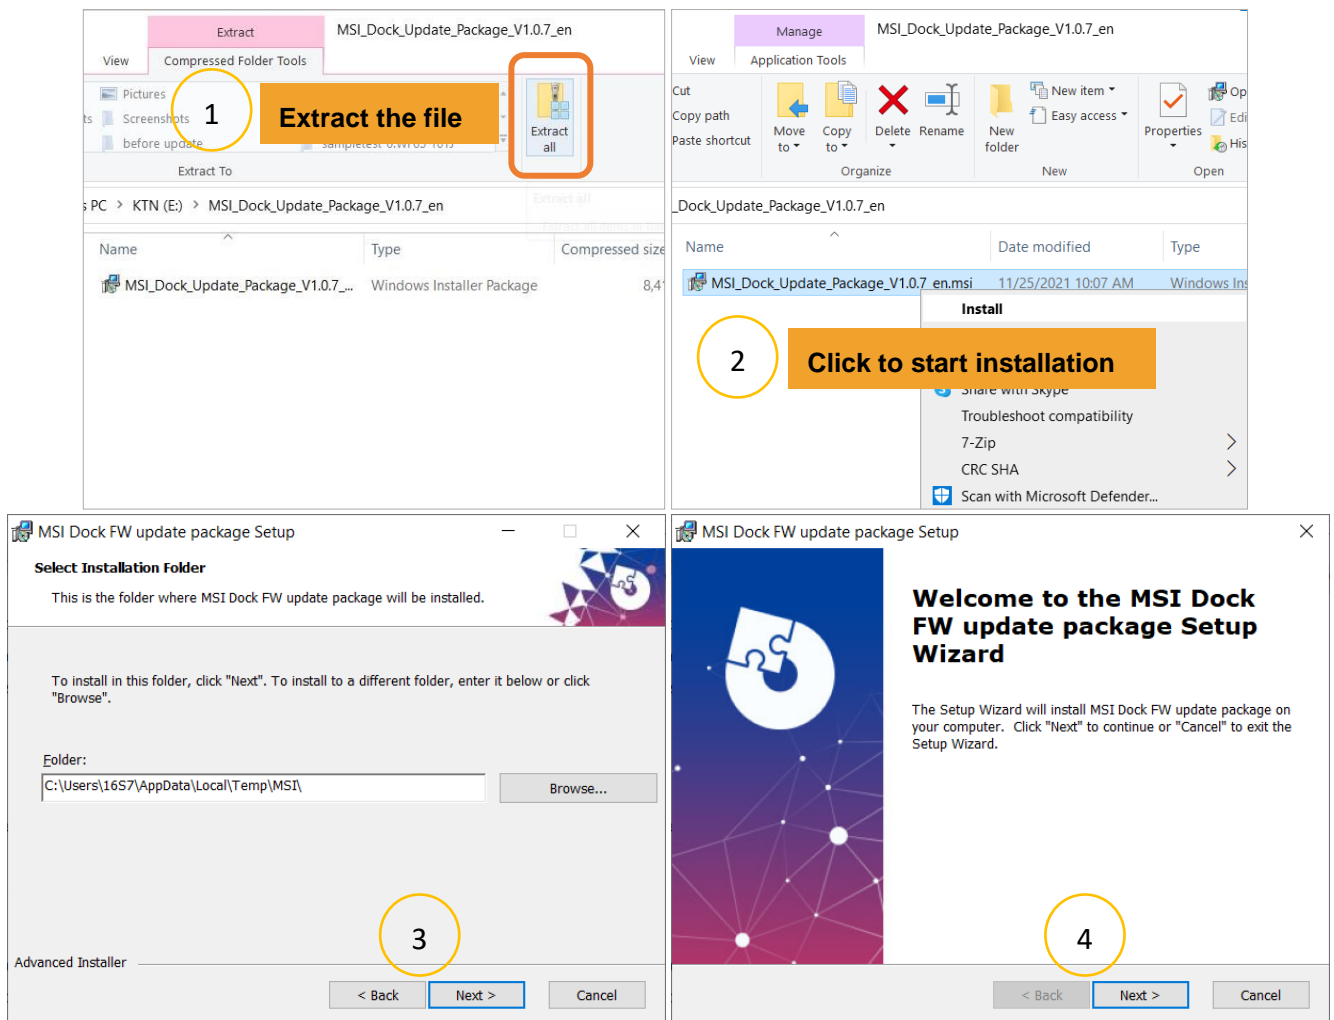


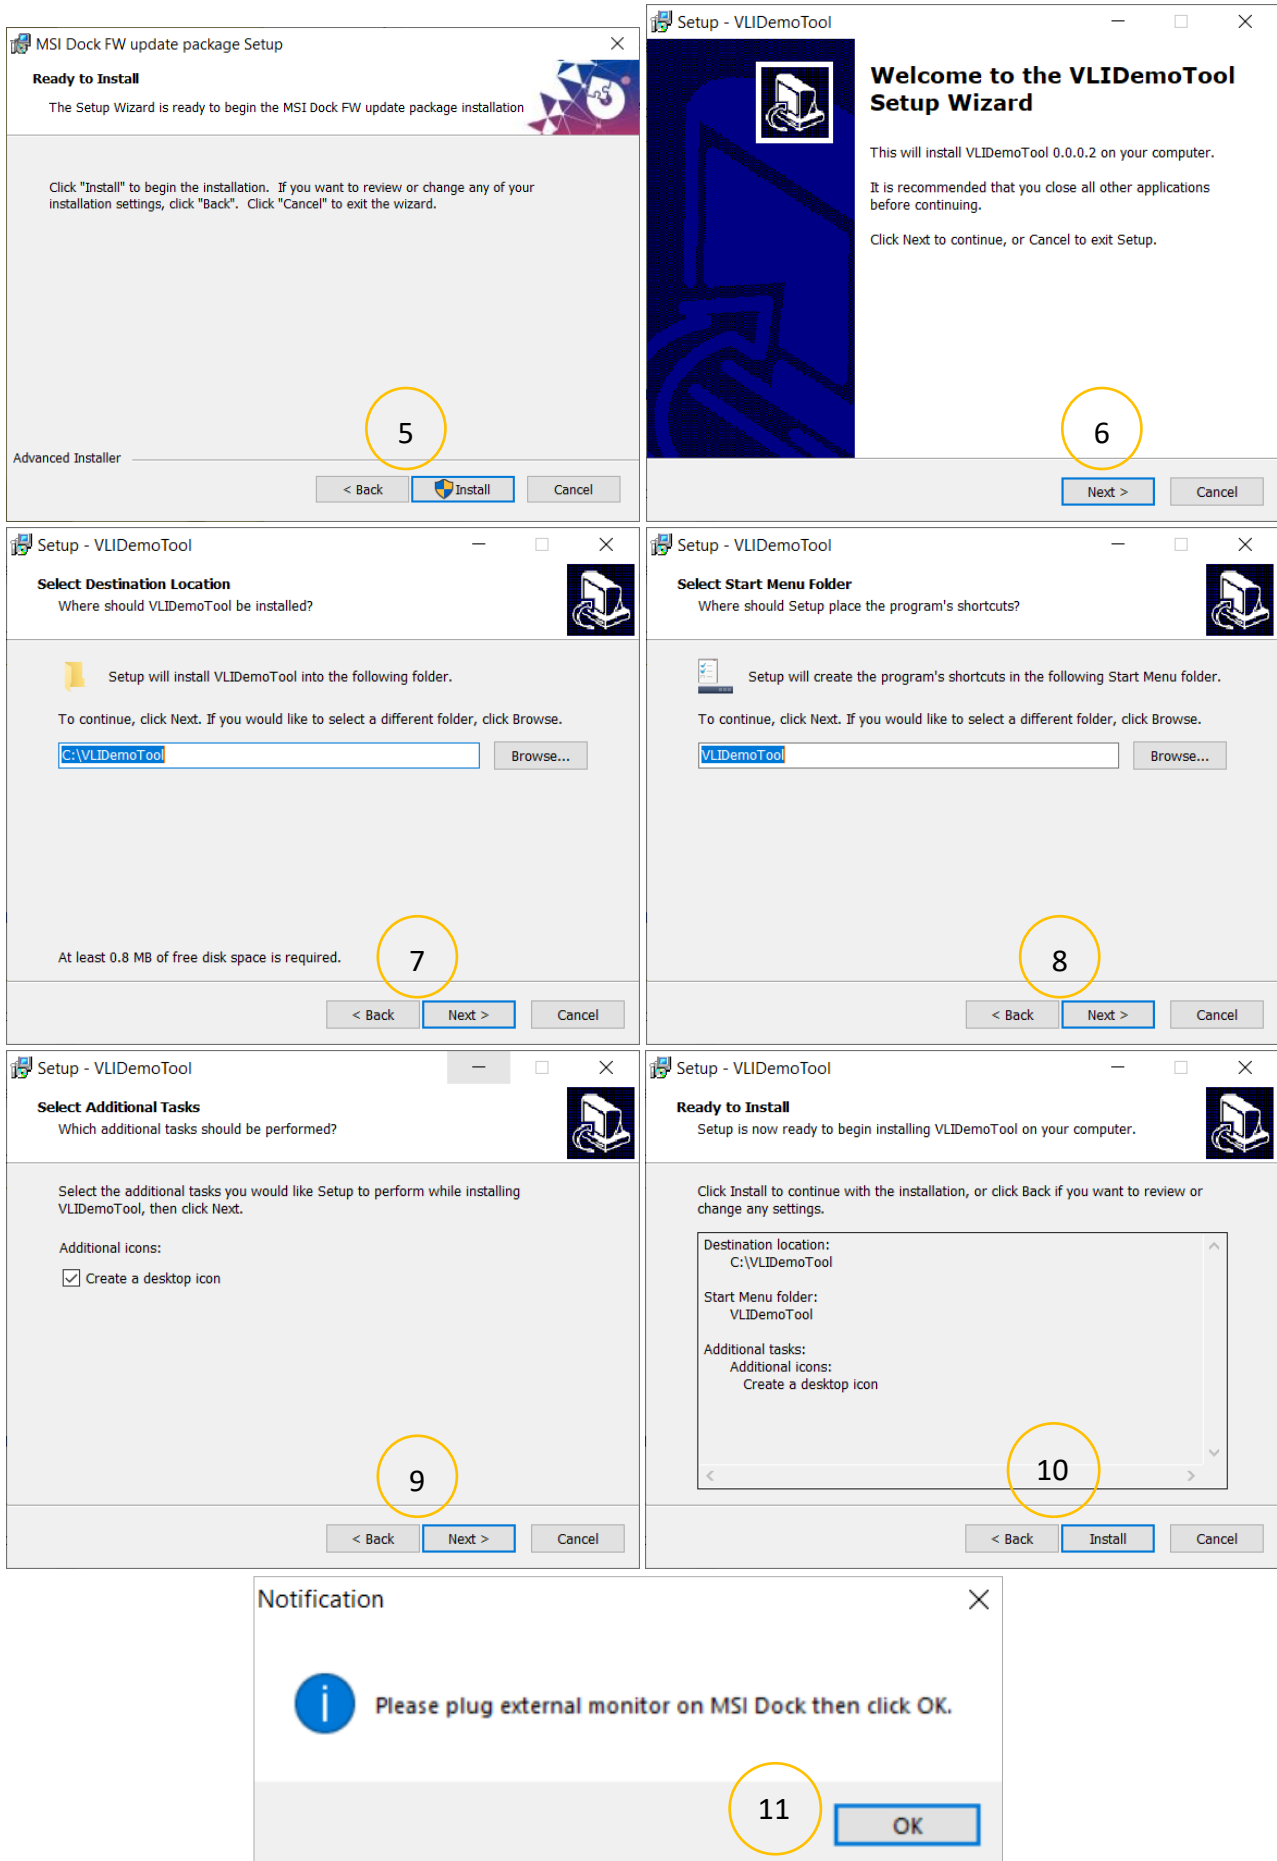


12.FW update finished

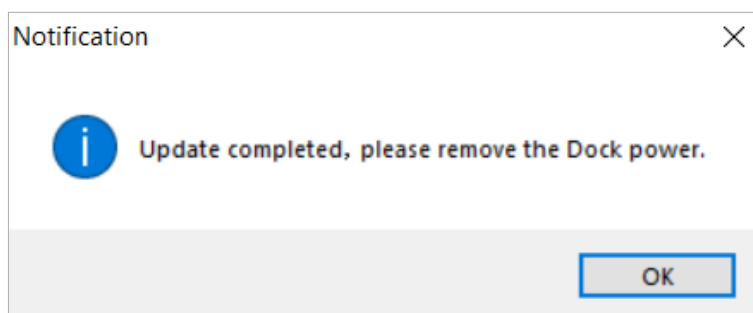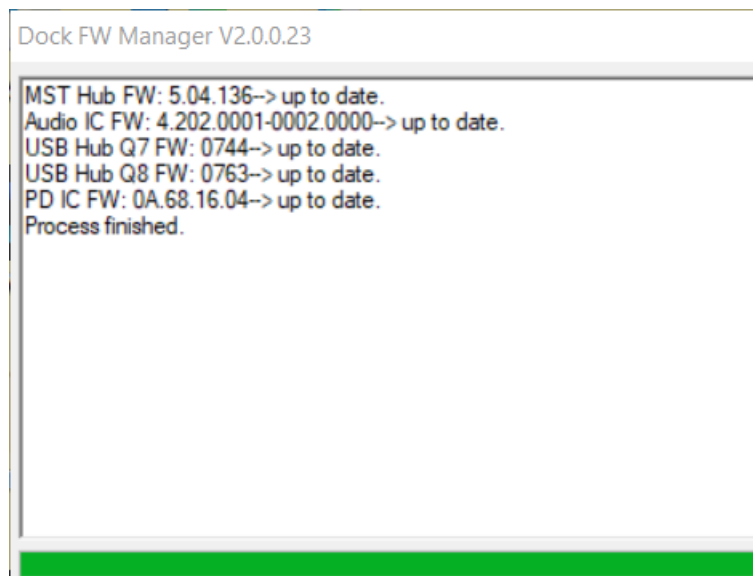

*Note: If there error message shows up, please update again and keep connecting with power of docking station.

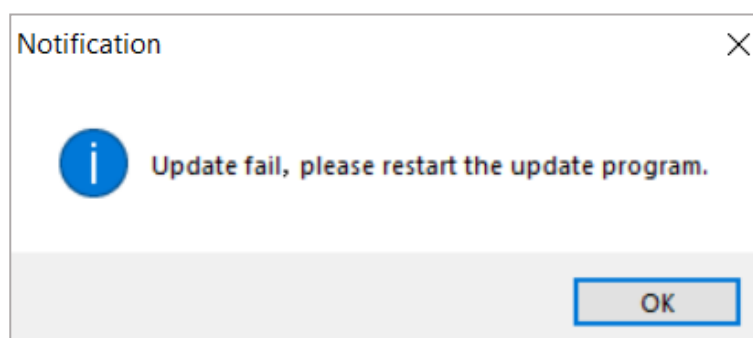

*If there an Error message pops up, please click “Ignore” to continue the update process.

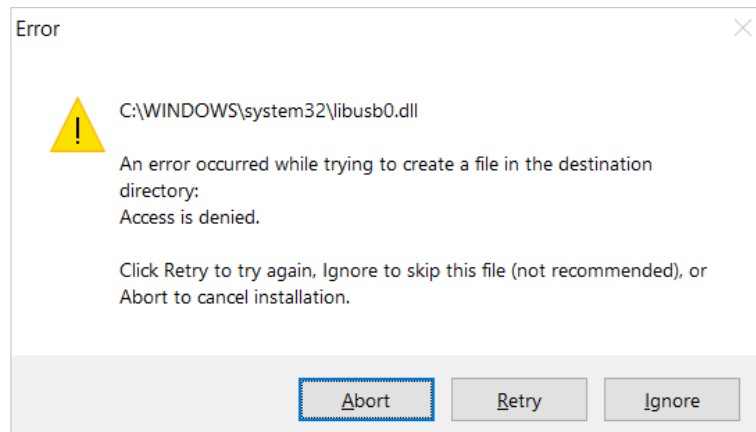

*Note: Keep connection between external monitor and docking station, after update process finishing, remove and reboot docking station then connect it to laptop.