

## G31M2 Series

**MS-7383 ( V1.X / V2.X ) Mainboard**



## Copyright Notice

---

The material in this document is the intellectual property of **MICRO-STAR INTERNATIONAL**. We take every care in the preparation of this document, but no guarantee is given as to the correctness of its contents. Our products are under continual improvement and we reserve the right to make changes without notice.

## Trademarks

---

All trademarks are the properties of their respective owners.

NVIDIA, the NVIDIA logo, DualNet, and nForce are registered trademarks or trademarks of NVIDIA Corporation in the United States and/or other countries.

AMD, Athlon™, Athlon™ XP, Thoroughbred™, and Duron™ are registered trademarks of AMD Corporation.

Intel® and Pentium® are registered trademarks of Intel Corporation.

PS/2 and OS®/2 are registered trademarks of International Business Machines Corporation.

Windows® 98/2000/NT/XP/Vista are registered trademarks of Microsoft Corporation.

Netware® is a registered trademark of Novell, Inc.

Award® is a registered trademark of Phoenix Technologies Ltd.

AMI® is a registered trademark of American Megatrends Inc.

## Revision History

---

Revision	Revision History	Date
V1.0 / V2.0	First release	July 2007
V1.0 / V2.1	Add 1394 for V2.1	August 2007

## Technical Support

---

If a problem arises with your system and no solution can be obtained from the user's manual, please contact your place of purchase or local distributor. Alternatively, please try the following help resources for further guidance.

- 🔍 Visit the MSI website for FAQ, technical guide, BIOS updates, driver updates, and other information: <http://global.msi.com.tw/index.php?func=faqIndex>
- 🔍 Contact our technical staff at: <http://support.msi.com.tw/>

## Safety Instructions

---

1. Always read the safety instructions carefully.
2. Keep this User's Manual for future reference.
3. Keep this equipment away from humidity.
4. Lay this equipment on a reliable flat surface before setting it up.
5. The openings on the enclosure are for air convection hence protects the equipment from overheating. DO NOT COVER THE OPENINGS.
6. Make sure the voltage of the power source and adjust properly 110/220V before connecting the equipment to the power inlet.
7. Place the power cord such a way that people can not step on it. Do not place anything over the power cord.
8. Always Unplug the Power Cord before inserting any add-on card or module.
9. All cautions and warnings on the equipment should be noted.
10. Never pour any liquid into the opening that could damage or cause electrical shock.
11. If any of the following situations arises, get the equipment checked by a service personnel:
  - † The power cord or plug is damaged.
  - † Liquid has penetrated into the equipment.
  - † The equipment has been exposed to moisture.
  - † The equipment has not work well or you can not get it work according to User's Manual.
  - † The equipment has dropped and damaged.
  - † The equipment has obvious sign of breakage.
12. DO NOT LEAVE THIS EQUIPMENT IN AN ENVIRONMENT UNCONDITIONED, STORAGE TEMPERATURE ABOVE 60°C (140°F), IT MAY DAMAGE THE EQUIPMENT.



**CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.



**警告使用者:**  
這是甲類的資訊產品，在居住的環境中使用時，可能會造成無線電干擾，在這種情況下，使用者會被要求採取某些適當的對策。



廢電池請回收

For better environmental protection, waste batteries should be collected separately for recycling or special disposal.

## FCC-B Radio Frequency Interference Statement

---

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part



**N1996**

15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the measures listed below.

- † Reorient or relocate the receiving antenna.
- † Increase the separation between the equipment and receiver.
- † Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- † Consult the dealer or an experienced radio/television technician for help.

### Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### Notice 2

Shielded interface cables and A.C. power cord, if any, must be used in order to comply with the emission limits.

VOIR LANOTICE D'INSTALLATION AVANT DE RACCORDER AU RESEAU.



**Micro-Star International**  
**MS-7383**

*This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:*

- (1) this device may not cause harmful interference, and*
- (2) this device must accept any interference received, including interference that may cause undesired operation.*



# WEEE (Waste Electrical and Electronic Equipment) Statement

---



## ENGLISH

To protect the global environment and as an environmentalist, MSI must remind you that...

Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2002/96/EC, which takes effect on August 13, 2005, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life. MSI will comply with the product take back requirements at the end of life of MSI-branded products that are sold into the EU. You can return these products to local collection points.

## DEUTSCH

Hinweis von MSI zur Erhaltung und Schutz unserer Umwelt

Gemäß der Richtlinie 2002/96/EG über Elektro- und Elektronik-Altgeräte dürfen Elektro- und Elektronik-Altgeräte nicht mehr als kommunale Abfälle entsorgt werden. MSI hat europaweit verschiedene Sammel- und Recyclingunternehmen beauftrag, die in die Europäische Union in Verkehr gebrachten Produkte, am Ende seines Lebenszyklus zurückzunehmen. Bitte entsorgen Sie dieses Produkt zum gegebenen Zeitpunkt ausschliesslich an einer lokalen Altgerätesammelstelle in Ihrer Nähe.

## FRANÇAIS

En tant qu'écologiste et afin de protéger l'environnement, MSI tient à rappeler ceci...

Au sujet de la directive européenne (EU) relative aux déchets des équipement électriques et électroniques, directive 2002/96/EC, prenant effet le 13 août 2005, que les produits électriques et électroniques ne peuvent être déposés dans les décharges ou tout simplement mis à la poubelle. Les fabricants de ces équipements seront obligés de récupérer certains produits en fin de vie. MSI prendra en compte cette exigence relative au retour des produits en fin de vie au sein de la communauté européenne. Par conséquent vous pouvez retourner localement ces matériels dans les points de collecte.

## РУССКИЙ

Компания MSI предпринимает активные действия по защите окружающей среды, поэтому напоминаем вам, что...

В соответствии с директивой Европейского Союза (ЕС) по предотвращению загрязнения окружающей среды использованным электрическим и электронным оборудованием (директива WEEE 2002/96/EC), вступающей в силу 13 августа 2005 года, изделия, относящиеся к электрическому и электронному оборудованию, не могут рассматриваться как бытовой мусор, поэтому производители вышеперечисленного электронного оборудования обязаны принимать его для переработки по окончании срока службы. MSI обязуется соблюдать требования по приему продукции, проданной под маркой MSI на территории ЕС, в переработку по окончании срока службы. Вы можете вернуть эти изделия в специализированные пункты приема.

## ESPAÑOL

MSI como empresa comprometida con la protección del medio ambiente, recomienda:

Bajo la directiva 2002/96/EC de la Unión Europea en materia de desechos y/o equipos electrónicos, con fecha de rigor desde el 13 de agosto de 2005, los productos clasificados como "eléctricos y equipos electrónicos" no pueden ser depositados en los contenedores habituales de su municipio, los fabricantes de equipos electrónicos, están obligados a hacerse cargo de dichos productos al término de su período de vida. MSI estará comprometido con los términos de recogida de sus productos vendidos en la Unión Europea al final de su período de vida. Usted debe depositar estos productos en el punto limpio establecido por el ayuntamiento de su localidad o entregar a una empresa autorizada para la recogida de estos residuos.

## NEDERLANDS

Om het milieu te beschermen, wil MSI u eraan herinneren dat....

De richtlijn van de Europese Unie (EU) met betrekking tot Vervuiling van Elektrische en Electronische producten (2002/96/EC), die op 13 Augustus 2005 in zal gaan kunnen niet meer beschouwd worden als vervuiling.

Fabrikanten van dit soort producten worden verplicht om producten retour te nemen aan het eind van hun levenscyclus. MSI zal overeenkomstig de richtlijn handelen voor de producten die de merknaam MSI dragen en verkocht zijn in de EU. Deze goederen kunnen geretourneerd worden op lokale inzamelingspunten.

## SRPSKI

Da bi zaštitili prirodnu sredinu, i kao preduzeće koje vodi računa o okolini i prirodnoj sredini, MSI mora da vas podesti da...

Po Direktivi Evropske unije ("EU") o odbačenju električarske i električne opreme, Direktiva 2002/96/EC, koja stupa na snagu od 13. Avgusta 2005, proizvodi koji spadaju pod "elektronsku i električnu opremu" ne mogu više biti odbačeni kao običan otpad i proizvođači ove opreme biće prinuđeni da uzmu natrag ove proizvode na kraju njihovog uobičajenog veka trajanja. MSI će poštovati zahtev o preuzimanju ovakvih proizvoda kojima je istekao vek trajanja, koji imaju MSI oznaku i koji su prodati u EU. Ove proizvode možete vratiti na lokalnim mestima za prikupljanje.

## POLSKI

Aby chronić nasze środowisko naturalne oraz jako firma dbająca o ekologię, MSI przypomina, że...

Zgodnie z Dyrektywą Unii Europejskiej ("UE") dotyczącą odpadów produktów elektrycznych i elektronicznych (Dyrektywa 2002/96/EC), która wchodzi w życie 13 sierpnia 2005, tzw. "produkty oraz wyposażenie elektryczne i elektroniczne" nie mogą być traktowane jako śmieć komunalne, tak więc producenci tych produktów będą zobowiązani do odbierania ich w momencie gdy produkt jest wycofywany z użycia. MSI wypełni wymagania UE, przyjmując produkty (sprzedawane na terenie Unii Europejskiej) wycofywane z użycia. Produkty MSI będzie można zwracać w wyznaczonych punktach zbiorczych.

## TÜRKÇE

Çevreci özelliğiyle bilinen MSI dünyada çevreyi korumak için hatırlatır:

Avrupa Birliği (AB) Kararnamesi Elektrik ve Elektronik Malzeme Atığı, 2002/96/EC Kararnamesi altında 13 Ağustos 2005 tarihinden itibaren geçerli olmak üzere, elektrikli ve elektronik malzemeler diğer atıklar gibi çöpe atılamayacak ve bu elektronik cihazların üreticileri, cihazların kullanım süreleri bittikten sonra ürünleri geri toplamakla yükümlü olacaktır. Avrupa Birliği'ne satılan MSI markalı ürünlerin kullanım süreleri bittiğinde MSI ürünlerin geri alınması isteği ile işbirliği içerisinde olacaktır. Ürünlerinizi yerel toplama noktalarına bırakabilirsiniz.

## ČESKY

Záleží nám na ochraně životního prostředí - společnost MSI upozorňuje...

Podle směrnice Evropské unie ("EU") o likvidaci elektrických a elektronických výrobků 2002/96/EC platné od 13. srpna 2005 je zakázáno likvidovat "elektrické a elektronické výrobky" v běžném komunálním odpadu a výrobci elektronických výrobků, na které se tato směrnice vztahuje, budou povinni odebírat takové výrobky zpět po skončení jejich životnosti. Společnost MSI splní požadavky na odebrání výrobků značky MSI, prodávaných v zemích EU, po skončení jejich životnosti. Tyto výrobky můžete odevzdat v místních sběrnách.

## MAGYAR

Annak érdekében, hogy környezetünket megvédjük, illetve környezetvédként fellépve az MSI emlékezteti Önt, hogy ...

Az Európai Unió („EU”) 2005. augusztus 13-án hatályba lépő, az elektromos és elektronikus berendezések hulladékairól szóló 2002/96/EK irányelve szerint az elektromos és elektronikus berendezések többé nem kezelhetők lakossági hulladékként, és az ilyen elektronikus berendezések gyártói kötelesek válnak az ilyen termékek visszavételére azok hasznos élettartama végén. Az MSI befartja a termékvisszavétellel kapcsolatos követelményeket az MSI márkánév alatt az EU-n belül értékesített termékek esetében, azok élettartamának végén. Az ilyen termékeket a legközelebbi gyűjtőhelyre viheti.

## ITALIANO

Per proteggere l'ambiente, MSI, da sempre amica della natura, ti ricorda che....

In base alla Direttiva dell'Unione Europea (EU) sullo Smaltimento dei Materiali Elettrici ed Elettronici, Direttiva 2002/96/EC in vigore dal 13 Agosto 2005, prodotti appartenenti alla categoria dei Materiali Elettrici ed Elettronici non possono più essere eliminati come rifiuti municipali: i produttori di detti materiali saranno obbligati a ritirare ogni prodotto alla fine del suo ciclo di vita. MSI si adeguerà a tale Direttiva ritirando tutti i prodotti marchiati MSI che sono stati venduti all'interno dell'Unione Europea alla fine del loro ciclo di vita. È possibile portare i prodotti nel più vicino punto di raccolta.

# CONTENTS

Copyright Notice .....	ii
Trademarks .....	ii
Revision History .....	ii
Technical Support .....	ii
Safety Instructions .....	iii
FCC-B Radio Frequency Interference Statement .....	iv
WEEE (Waste Electrical and Electronic Equipment) Statement .....	v
<b>Chapter 1. Getting Started .....</b>	<b>1-1</b>
Mainboard Specifications .....	1-2
Mainboard Layout .....	1-4
Packing Checklist .....	1-4
<b>Chapter 2. Hardware Setup .....</b>	<b>2-1</b>
Quick Components Guide .....	2-2
CPU (Central Processing Unit) .....	2-4
Memory .....	2-7
Power Supply .....	2-12
Back Panel .....	2-13
Connectors .....	2-15
Jumpers .....	2-23
Slots .....	2-24
<b>Chapter 3. BIOS Setup .....</b>	<b>3-1</b>
Entering Setup .....	3-2
The Main Menu .....	3-4
Standard CMOS Features .....	3-6
Advanced BIOS Features .....	3-9
Integrated Peripherals .....	3-12
Power Management Setup .....	3-14
PNP/PCI Configurations .....	3-17
H/W Monitor .....	3-19
Frequency/Voltage Control .....	3-20
Load Fail-Safe/ Optimized Defaults .....	3-23
BIOS Setting Password .....	3-24
<b>Appendix A. Realtek ALC888 Audio .....</b>	<b>A-1</b>
Installing the Realtek HD Audio Driver .....	A-2
Software Configuration .....	A-4
Hardware Setup .....	A-19

<b>Appendix B. Dual Core Center .....</b>	<b>B-1</b>
Activating Dual Core Center .....	B-2
Main .....	B-3
DOT (Dynamic OverClocking) .....	B-5
Clock .....	B-6
Voltage .....	B-7
FAN Speed .....	B-8
Temperature .....	B-9
User Profile .....	B-10

# Chapter 1

## Getting Started

Thank you for choosing the G31M2 Series (MS-7383 V1.X / V2.X) Micro ATX mainboard. The G31M2 Series mainboards are based on **Intel® G31 & ICH7** chipsets for optimal system efficiency. Designed to fit the advanced **Intel® Core 2** processor, the G31M2 Series deliver a high performance and professional desktop platform solution.

## **Mainboard Specifications**

### **Processor Support**

- Intel® Core 2 Quad, Core 2 Duo, Pentium Dual-Core E2XXX and Celeron 440/430/420 in the LGA775 package.
- Intel® Yorkfield, Wolfdale.  
(For the latest information about CPU, please visit <http://global.msi.com.tw/index.php?func=cpuform>)

### **Supported FSB**

- 1333/1066/ 800 MHz

### **Chipset**

- North Bridge: Intel® G31 chipset
- South Bridge: Intel® ICH7 chipset

### **Memory Support**

- DDR2 800/ 667 SDRAM (4GB Max)
- 4 DDR2 DIMMs (240pin / 1.8V)  
(For more information on compatible components, please visit <http://global.msi.com.tw/index.php?func=testreport>)

### **LAN**

- Supports PCIE LAN 10/100/1000 Fast Ethernet by Realtek 8111B

### **Audio**

- Chip integrated by Realtek® ALC888
- Flexible 8-channel audio with jack sensing
- Compliant with Azalia 1.0 Spec
- Meet Microsoft Vista Premium SPEC

### **IDE**

- 1 IDE port by ICH7
- Supports Ultra DMA 66/100 mode
- Supports PIO, Bus Master operation mode

### **SATA**

- 4 SATA II ports by ICH7
- Supports storage and data transfers at up to 3Gb/s

### **Floppy**

- 1 floppy port
- Supports 1 FDD with 360KB, 720KB, 1.2MB, 1.44MB and 2.88MB

## Connectors

### ● Back panel

- 1 PS/2 mouse port
- 1 PS/2 keyboard port
- 4 USB 2.0 ports
- 1 VGA port
- 1 DVI-D port (optional)
- 1 LAN jack
- 6 flexible audio jacks
- 1 Serial port (COM1)
- 1 IEEE1394 port (optional for V2.X)

### ● On-Board Pinheaders/ Connectors

- 1 Front Panel Audio pinheader
- 1 CD-In pinheader
- 1 SPDIF-Out pinheader
- 2 USB 2.0 pinheaders
- 1 Chassis Intrusion Switch pinheader
- 1 Parallel port supporting SPP/EPP/ECP mode pinheader
- 1 Serial port pinheader (for V2.X)
- 1 IEEE1394 pinheader (optional for V2.X)

## Slots

- 1 PCI Express x16 slot (If your mainboard has the DVI port, this PCIE slot can only support up to x8(2.0GB/s) transfer rate.
- 1 PCI Express x1 slot (for V1.X)
- 2 PCI slots (for V1.X)
- 3 PCI slots (for V2.X)
- Support 3.3V/ 5V PCI bus Interface

## TPM (optional)

- Supports TPM

## Form Factor


- M-ATX (23cm X 24.4cm, for V1.X)
- M-ATX (24.4cm X 24.4cm, for V2.X)

## Mounting


- 6 mounting holes (for V1.X)
- 8 mounting holes (for V2.X)



## Mainboard Layout

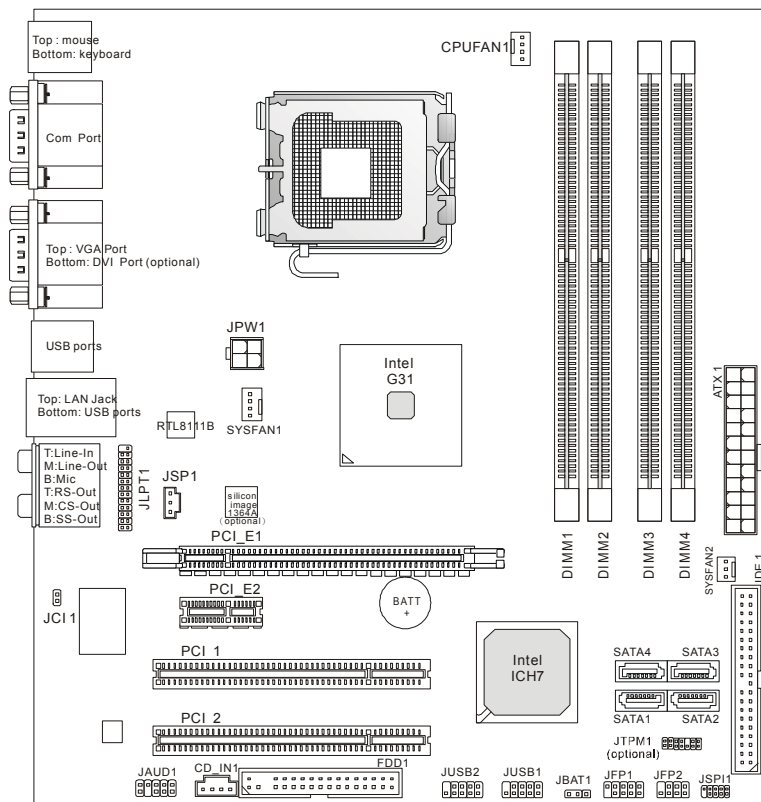

**G31M2 Series (MS-7383 v1.X) M-ATX Mainboard**

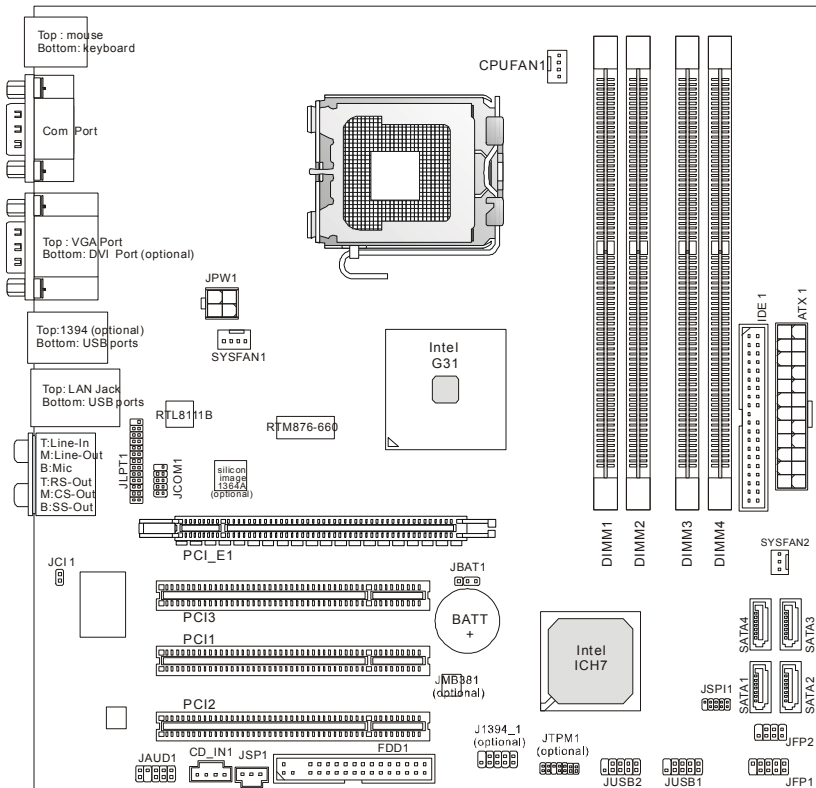


**G31M2 Series (MS-7383 v2.X) M-ATX Mainboard**

## **Packing Checklist**



MSI motherboard



MSI Driver/Utility CD



SATA Cable (Optional)



Power Cable



Back IO Shield



Standard Cable for  
IDE Devices



User's Guide



USB Bracket (Optional)



Parallel Port Bracket  
(Optional)



1394 Bracket  
(Optional for V2.X)

\* The pictures are for reference only. Your packing contents may vary depending on the model you purchased.


## Chapter 2

# Hardware Setup


This chapter provides you with the information about hardware setup procedures. While doing the installation, be careful in holding the components and follow the installation procedures. For some components, if you install in the wrong orientation, the components will not work properly.

Use a grounded wrist strap before handling computer components. Static electricity may damage the components.

## Quick Components Guide

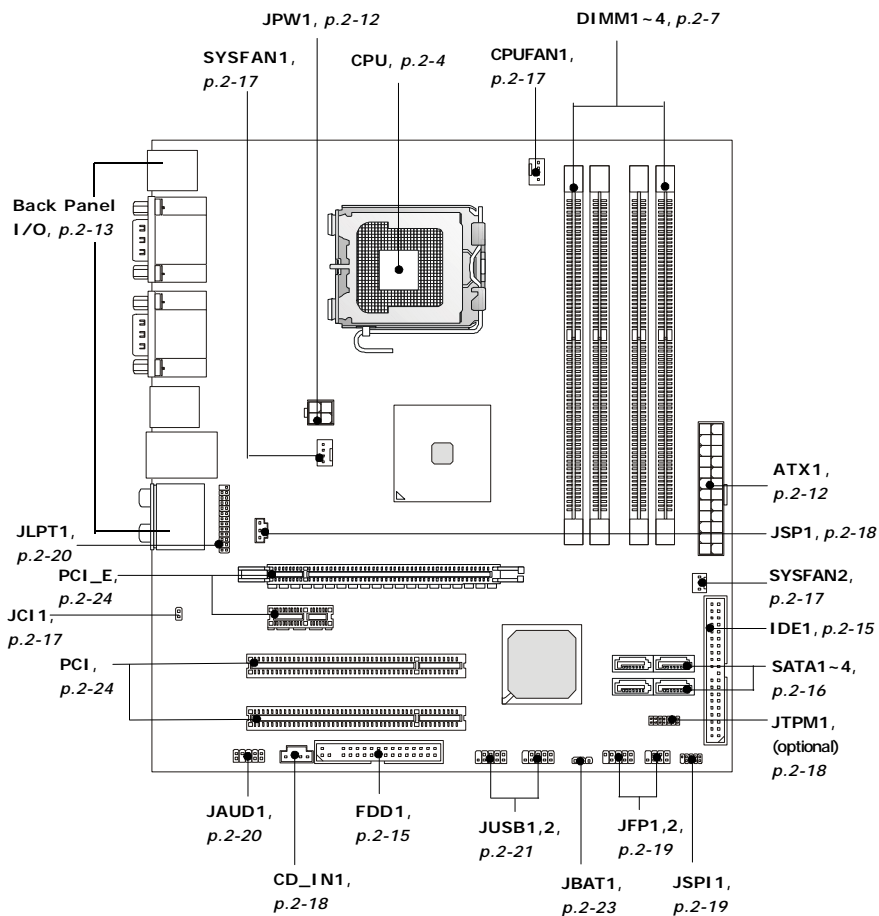

**G31M2 V1.X**

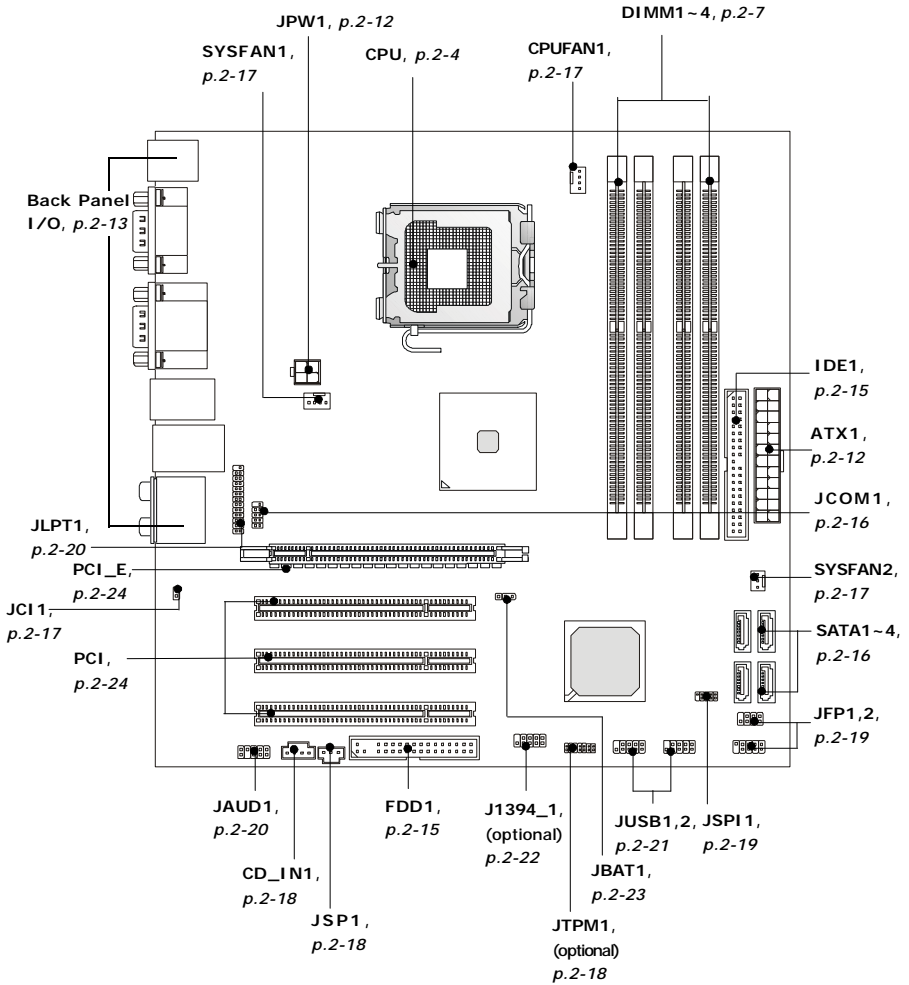

**G31M2 V2.X**

## CPU (Central Processing Unit)

This mainboard supports Intel® processor in LGA 775 package. When you are installing the CPU, **make sure to install the cooler to prevent overheating**. If you do not have the CPU cooler, consult your dealer before turning on the computer.

For the latest information about CPU, please visit <http://global.msi.com.tw/index.php?func=cpuform>



### Important

#### Overheating

*Overheating will seriously damage the CPU and system. Always make sure the cooling fan can work properly to protect the CPU from overheating. Make sure that you apply an even layer of thermal paste (or thermal tape) between the CPU and the heatsink to enhance heat dissipation.*

#### Replacing the CPU


*While replacing the CPU, always turn off the ATX power supply or unplug the power supply's power cord from the grounded outlet first to ensure the safety of CPU.*

#### Overclocking

*This mainboard is designed to support overclocking. However, please make sure your components are able to tolerate such abnormal setting, while doing overclocking. Any attempt to operate beyond product specifications is not recommended. **We do not guarantee the damages or risks caused by inadequate operation or beyond product specifications.***


## Introduction to LGA 775 CPU

The pin-pad side of LGA 775 CPU.

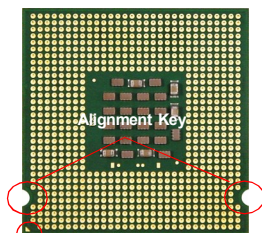

Yellow triangle is the Pin 1 indicator

The surface of LGA 775 CPU. Remember to apply some thermal paste on it for better heat dispersion.

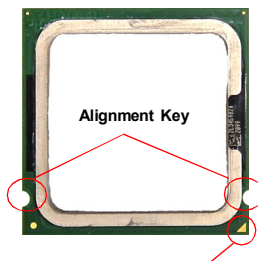


Yellow triangle is the Pin 1 indicator


## CPU & Cooler Installation

When you are installing the CPU, **make sure the CPU has a cooler attached on the top to prevent overheating**. Meanwhile, do not forget to apply some thermal paste on CPU before installing the heat sink/cooler fan for better heat dispersion. Follow the steps below to install the CPU & cooler correctly. Wrong installation will cause the damage of your CPU & motherboard.


1. The CPU socket has a plastic cap on it to protect the contact from damage. Before you install the CPU, always cover it to protect the socket pin.

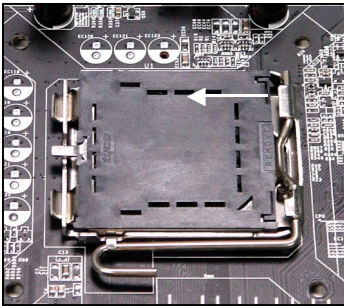


2. Remove the cap from lever hinge side (as the arrow shows).

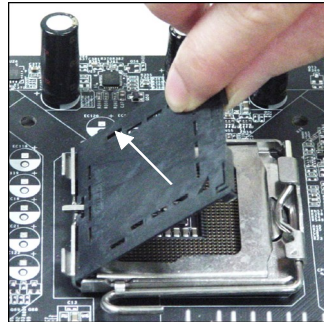

3. The pins of socket reveal.

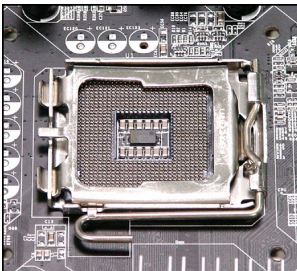

4. Open the load lever.

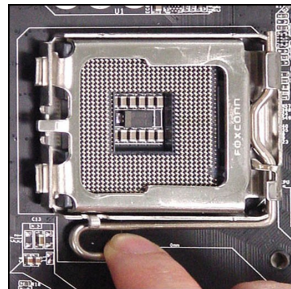


### Important

1. Confirm if your CPU cooler is firmly installed before turning on your system.
2. Do not touch the CPU socket pins to avoid damaging.
3. The availability of the CPU land side cover depends on your CPU packing.




## MS-7383 Mainboard


5. Lift the load lever up and open the load plate.

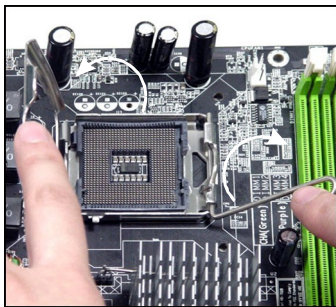


6. After confirming the CPU direction for correct mating, put down the CPU in the socket housing frame. Be sure to grasp on the edge of the CPU base. Note that the alignment keys are matched.

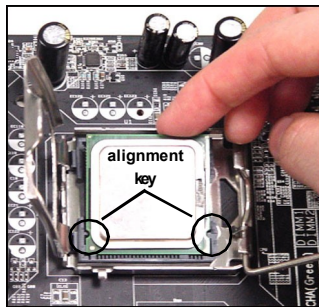

7. Visually inspect if the CPU is seated well into the socket. If not, take out the CPU with pure vertical motion and reinstall.

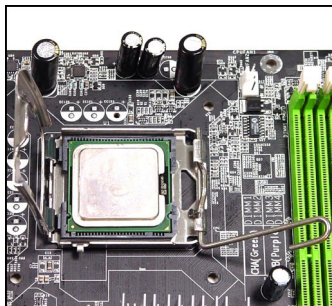


8. Cover the load plate onto the package.

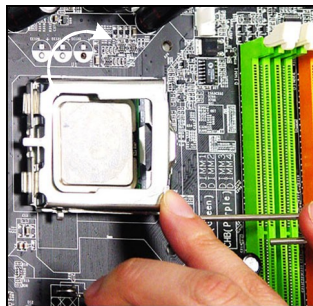

## Memory

These DIMM slots are used for installing memory modules.

For more information on compatible components, please visit <http://global.msi.com.tw/index.php?func=testreport>



**Single-Channel:** All DIMMs in GREEN

**Dual-Channel:** Channel A in GREEN; Channel B in ORANGE

Due to chipset limitations, to enable dual channel mode or single channel mode, installing memory modules should refer to the following table.

### Memory Installation Combination

(SS : single side, DS : double side, X : none installed memory)

		DIMM1	DIMM2	DIMM3	DIMM4
Dual Channel Mode	Combination1	DS/SS	X	DS/SS	X
	Combination2	DS/SS	X	X	DS/SS
	Combination3	X	DS/SS	DS/SS	X
	Combination4	X	DS/SS	X	DS/SS
	Combination5	SS	SS	SS	SS
Single Channel Mode	Combination1	DS/SS	X	X	X
	Combination2	X	DS/SS	X	X
	Combination3	X	X	DS/SS	X
	Combination4	X	X	X	DS/SS
	Combination5	SS	SS	X	X
	Combination6	X	X	SS	SS
	Combination7	SS	SS	DS/SS	X
	Combination8	SS	SS	X	DS/SS
	Combination9	DS/SS	X	SS	SS
	Combination10	X	DS/SS	SS	SS



### Important

*Due to chipset specifications restrictions, in order to avoid system is not bootable or memory identification errors. Please do not install two double-side memory modules in the same channel (the same color DIMM slots).*

## Installing Memory Modules


1. The memory module has only one notch on the center and will only fit in the right orientation.
2. Insert the memory module vertically into the DIMM slot. Then push it in until the golden finger on the memory module is deeply inserted in the DIMM slot.



### Important

*You can barely see the golden finger if the memory module is properly inserted in the DIMM slot.*

3. The plastic clip at each side of the DIMM slot will automatically close.

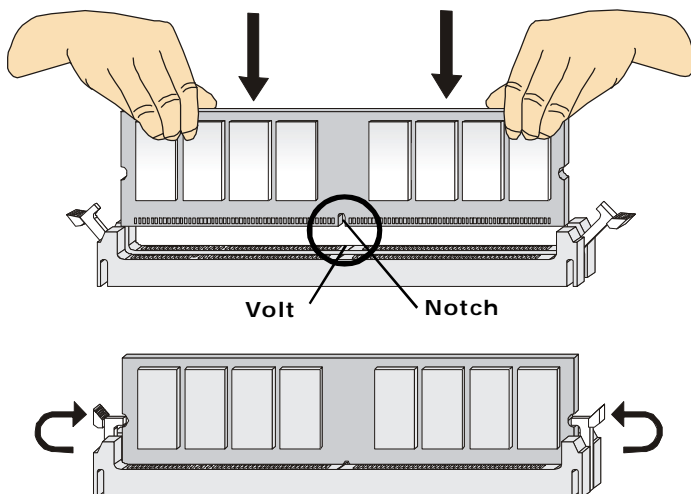



### Important

- *DDR2 memory modules are not interchangeable with DDR and the DDR2 standard is not backwards compatible. You should always install DDR2 memory modules in the DDR2 DIMM slots.*
- *In Dual-Channel mode, make sure that you install memory modules of **the same type and density** in different channel DIMM slots.*
- *To enable successful system boot-up, always insert the memory modules into the **DIMM1** first.*

We recommend that you to use the available DDR2 memory modules as following.

Manufacturer	model	Size
SEC	M378T3253FZ3-CE6(SEC K4T56083QF-ZCE6)	256MB
A-DATA	M2OAD5G3H3166I1C52(with heat sink)	512MB
A-DATA	M2OAD5G3H3166I1C52(A-DATAAD29608A8A-3EC)	512MB
AENEON	AET660UD00-30DA98Z(AENEON AET93F30DA)	512MB
AENEON	AET660UD00-30DB97X(AENEON AET93R30DB)	512MB
BiaoXing	BVDD512M667C5 [BiaoXing](BiaoXing 0627K 64PX08)	512MB
BiaoXing	BVDD512M667C5 [AENEON](AENEON AET93F30D)	512MB
KINGMAX	KLCC28F-A8K15[EGES](KINGMAX KKA8FEIBF-HJK-30A)	512MB
CORSAIR	XMS2 Xtreme CM2X5 12-5400C4(with heat sink)	512MB
GEIL	A008E6464T1AG9AKT6G5(GEIL GL2L64G088BA37AW)	512MB
KINGMAX	KLCC28F-A8KB5[FGFS](KINGMAX KKEA88B4LZUG-25DF)	512MB
KINGMAX	KLCC28F-A8KB5[FGES](KINGMAX KKEA88B4LAUG-29DX)	512MB
KINGBOX	(KINGBOX DDR2640800-667)	512MB
KINGSTON	KHX6400D2/512(with heatsink)	512MB
KINGSTON	KVR667D2N5/512(Kingston)	512MB
PQI	MEAE-303HA(ELPIDA E2508AB-GE-E)	512MB
PQI	DDR2-800(ELPIDA E2508AB-GE-E)	512MB
ProMOS	V916764K24QBFW-F5(ProMOS V59C1512804QBF3)	512MB
PSC	AL6E8E63B-6EA1T(PSCA3R12E3GEF-G6EA)	512MB
Qimanda	HYS64T64000HU-3S-A(Qimonda HYB18T512800AF3S)	512MB
SEC	M378T6553CZ3-CE6(SEC K4T51083QC-ZCE6)	512MB
STAREX	STT512UD0815-667P(STAREX KT1286675413)	512MB

## MS-7383 Mainboard

Manufacturer	model	Size
TRANSCEND	TS64MLQ64V6J(ELPIDAE5108AE-6E-E)	512MB
Transcend	[TD](SEC K4T51083QC-ZCE6)	512MB
Transcend	[WA](JetRam J12Q3AB-6)	512MB
TwinMOS	8D23JK-TT(TwinMOS TMM6208G8M30C)	512MB
UMAX	53014053-7100B(UMAX U2S 12D30TP-6E)	512MB
VT	PC5300U-50550(VTKT1286675413)	512MB
AENEON	AET760UD00-30DA98Z(AENEON AET93F30DA)	1GB
AENEON	AET760UD00-30DB97X(AENEON AET93R30DB)	1GB
Apacer	78.01G92.9KC(ApacerAM4B5708GQJS7E)	1GB
Apacer	78.01G92.9LC(ApacerAM4B5708GEJS7E)	1GB
Apacer	78.01G92.AUC(ApacerAM4B5708BHJS7E)	1GB
CORSAIR	XMS2 Xtreme CM2X1024-5400C4	1GB
KINGBOX	EP1GD2667PS(KINGBOX EPD264082200E-4)	1GB
KINGBOX	UP1GD2667PS(KINGBOX ULD2640822009-4)	1GB
CORSAIR	VALUESELECT VS1GB667D2(CORSAIR 64M8CFEG)	1GB
GEIL	GE10245300[with heatsink](with heatsink)	1GB
GEIL	GE10245300(GEIL GL2L64G088BA30P)	1GB
GEIL	GX22GB5300SDC(with heat sink)	1GB
Infineon	HYS64T128020HU-3S-B(Infineon HYB18T512800BF3S)	1GB
KINGBOX	(KINGBOX DDR2640800-667)	1GB
KINGMAX	KLCD48F-A8KB5[FHES](KINGMAX KKEA88B4LAUG-29DX)	1GB
KINGMAX	KLCD48F-A8KB5[FHFS](KINGMAX KKEA88B4LZUG-25DF)	1GB
KINGMAX	KLCD48F-A8KL5[PHES](KINGMAX KKEA88L4PAUG-29AP)	1GB
KINGSTON	KHX6400D2/1G(with heat sink)	1GB
KINGSTON	KHX6400D2LLK2/2G(with heat sink)	1GB
OC	04701G16CX5S1G(Infinity 64M8PC5300)	1GB
ProMOS	V916765K24QBFW-F5(ProMOS V59C1512804QBF3)	1GB
PSC	AL7E8E63B-6EA1T(PSCA3R12E3GEF-G6EA)	1GB
SEC	M378T2953CZ3-CE6(SEC K4T51083QC)	1GB
Transcend	[TE](SEC K4T51083QC)	1GB
Transcend	[WB](JetRam J12Q3AB-6)	1GB
Transcend	JM388Q643A-5 [WB](Transcend TQ123MAF6)	1GB
Transcend	TS128MLQ64V6J[TE](SEC K4T51083QE)	1GB
TwinMOS	8D23KK-TT(TwinMOS TMM6208G8M30A)	1GB
UMAX	53016035-7100B(UMAX U2S 12D30TP-6E)	1GB
KINGMAX	KLCD48F-A8KI5[EHES](KINGMAX KKA8FEIBF-HJK-30A)	1GB

<b>Manufacturer</b>	<b>model</b>	<b>Size</b>
KINGSTON	KHX6000D2/1G(with heat sink)	1GB
KINGSTON	KVR667D2N5/1G(HYNIX HY5PS12821BFP-Y5)	1GB
KINGTIGER	KTG2Rx16CPC2-5300S(KINGTIGER KTG667PS6408 NST-C6)	1GB
KINGBOX	EP2GD2667PS(KINGBOX EPD2128082200-4)	2GB
KINGSTON	KVR667D2N5/2G(ELPIDAE1108AB-6E-E)	2GB
NANYA	NT2GT64U8HB0JY-3C(NANYA NT5TU128M8BJ-3C)	2GB
A-DATA	M2OEL6F3G3160A1E0Z(with heat sink)	256MB
TwinMOS	8G24IK-TW(with heat sink)	256MB
A-DATA	M2OEL6F3H4170A1E0Z(with heat sink)	512MB
CORSAIR	XMS2 Xtreme CM2X512A-6400(with heat sink)	512MB
CORSAIR	XMS2 (CM2X512-8500)(with heat sink)	512MB
GEIL	GX21GB6400DC(with heat sink)	512MB
Kingston	KVR800D2N5/512(SEC K4T51083QC)	512MB
OCI	04751208CZ5U2D(Infinity64M8PC6400)	512MB
ProMOS	V916764K24QBFW-G5(ProMOS V59C1512804QBF25)	512MB
PSC	AL6E8E63H-8E1K(PSC A3R12E3HEF-G8E)	512MB
Transcend	[VB](SEC K4T51083QC)	512MB
Transcend	[VB](HYNIX HY5PS12812B)	512MB
TwinMOS	8D-25JK2-ECTZ(ELPIDA E2508AB-6E-E)	512MB
KINGMAX	KLDC28F-A8K15[EGES](KINGMAX KKA8FEIBF-HJK-25A)	512MB
Apacer	78.01G9K.AUC(Apacer AM4B5708BHJS8E)	1GB
AENEON	AET760UD00-25DB97X(AENEON AET93R25DB)	1GB
Apacer	78.01G9I.AUC(Apacer AM4B5708BHJS8E)	1GB
GEIL	GX22GB6400DC(with heat sink)	1GB
HYNIX	HYMP512U64BP8-S5(HYNIX HY5PS12821BFP-S5)	1GB
KINGSTON	KVR800D2N5K2/2G(NANYA NT5TU64M8BE-25C)	1GB
OCI	04701G16CZ5U2D(Infinity64M8PC6400)	1GB
ProMOS	V916765K24QBFW-G5(ProMOS V59C1512804QBF25)	1GB
PSC	AL7E8E63H-8E1K(PSC A3R12E3HEF-G8E)	1GB
Super Talent	T800UB1GC4(with heat sink)	1GB
Transcend	[VQ](SEC K4T51083QC)	1GB
KINGBOX	EP1GD2800PS [Micron](Micron D9GMH)	1GB
KINGBOX	EP1GD2800PS[KINGBOX](KINGBOX EPD264082200P-3)	1GB
KINGMAX	KLDD48F-A8K15[EHESES](KINGMAX KKA8FEIBF-HJK-25A)	1GB
KINGSTON	KVR800D2N5/1G(Kingston D6408TLNBGL25)	1GB
KINGXCON	KIN800D2N4/1G[GeeDom](GeeDom GDT126408C-25)	1GB
TwinMos	8DE25KK5MTFTP(Twinmos TMM6208G8M25B)	1GB
KINGBOX	EP2GD2800PS(Micron D9HNL)	2GB

## Power Supply

### ATX 24-Pin Power Connector: ATX1

This connector allows you to connect an ATX 24-pin power supply. To connect the ATX 24-pin power supply, make sure the plug of the power supply is inserted in the proper orientation and the pins are aligned. Then push down the power supply firmly into the connector.

You may use the 20-pin ATX power supply as you like. If you'd like to use the 20-pin ATX power supply, please plug your power supply along with pin 1 & pin 13 (refer to the image at the right hand).



Pin Definition

PIN		SIGNAL	
1	+3.3V	13	+3.3V
2	+3.3V	14	-12V
3	GND	15	GND
4	+5V	16	PS-ON#
5	GND	17	GND
6	+5V	18	GND
7	GND	19	GND
8	PWROK	20	Res
9	5VSB	21	+5V
10	+12V	22	+5V
11	+12V	23	+5V
12	+3.3V	24	GND

### ATX 12V Power Connector: JPW1

This 12V power connector is used to provide power to the CPU.

Pin Definition


PIN		SIGNAL	
1	GND	3	12V
2	GND	4	12V



#### Important

1. Make sure that all the connectors are connected to proper ATX power supplies to ensure stable operation of the mainboard.
2. Power supply of 350 watts (and above) is highly recommended for system stability.
3. ATX 12V power connection should be greater than 18A.

## Back Panel

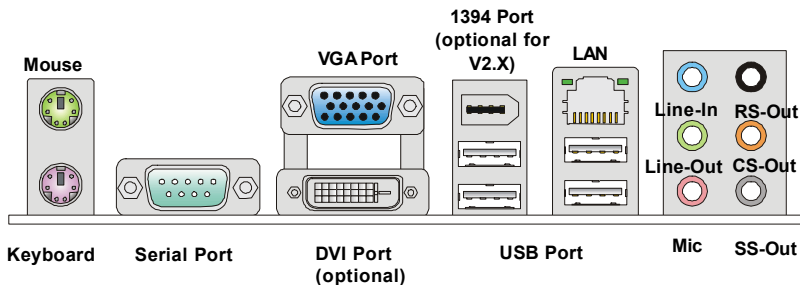

### ► Mouse/Keyboard

The standard PS/2® mouse/keyboard DIN connector is for a PS/2® mouse/keyboard.

### ► Serial Port

The serial port is a 16550A high speed communications port that sends/ receives 16 bytes FIFOs. You can attach a serial mouse or other serial devices directly to the connector.

### ► VGA Port

The DB15-pin female connector is provided for monitor.

### ► DVI Port (optional)

The DVI (Digital Visual Interface) connector allows you to connect a LCD monitor. It provides a high-speed digital interconnection between the computer and its display device. To connect an LCD monitor, simply plug your monitor cable into the DVI connector, and make sure that the other end of the cable is properly connected to your monitor (refer to your monitor manual for more information.)



## Important

**When DVI Onboard function is supported, the PCI\_E1 will be forced downtrain to 8X bus width.(optional)**

Depending on the type of add-in card installed in the PCI Express x16 connector, the DVI port will behave as described in below table.

PCI Express x16 connector status	DVI port status
No add-in card installed	Enabled
Non-video PCI Express x1 add-in card installed	Enabled
PCI Express x4, x8, or 16 add-in card installed	Disabled
ADD2 or MEC card installed	Disabled



### ► 1394 Port (optional for V2.X)


The IEEE1394 port on the back panel provides connection to IEEE1394 devices.

### ► USB Port

The USB (Universal Serial Bus) port is for attaching USB devices such as keyboard, mouse, or other USB-compatible devices.

### ► LAN

The standard RJ-45 LAN jack is for connection to the Local Area Network (LAN). You can connect a network cable to it.



LED	Color	LED State	Condition
Left	Yellow	Off	LAN link is not established.
		On (steady state)	LAN link is established.
		On (brighter & pulsing)	The computer is communicating with another computer on the LAN.
Right	Green	Off	10 Mbit/sec data rate is selected.
		On	100 Mbit/sec data rate is selected.
	Orange	On	1000 Mbit/sec data rate is selected.

### ► Audio Ports


These audio connectors are used for audio devices. You can differentiate the color of the audio jacks for different audio sound effects.

- **Line-Out (Green)** - Line Out, is a connector for speakers or headphones.
- **Line-In (Blue)** - Line In, is used for external CD player, tapeplayer or other audio devices.
- **Mic (Pink)** - Mic, is a connector for microphones.
- **RS-Out (Black)** - Rear-Surround Out in 4/ 5.1/ 7.1 channel mode.
- **CS-Out (Orange)** - Center/ Subwoofer Out in 5.1/ 7.1 channel mode.
- **SS-Out (Gray)** - Side-Surround Out 7.1 channel mode.

## Connectors


### Floppy Disk Drive Connector: FDD1

This connector supports 360KB, 720KB, 1.2MB, 1.44MB or 2.88MB floppy disk drive.

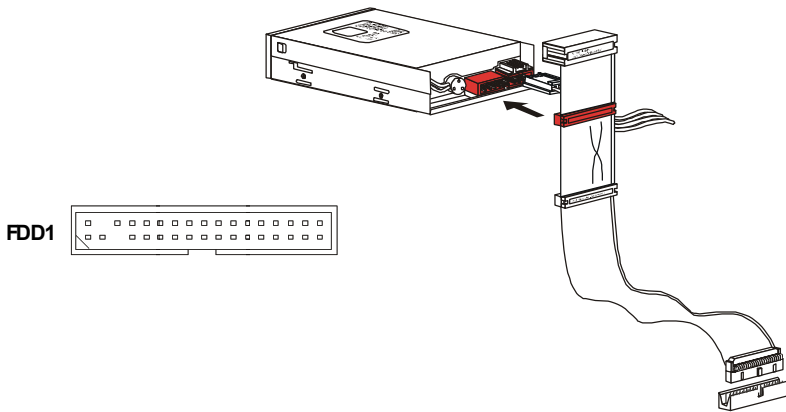

### IDE Connector: IDE1

This connector supports IDE hard disk drives, optical disk drives and other IDE devices.

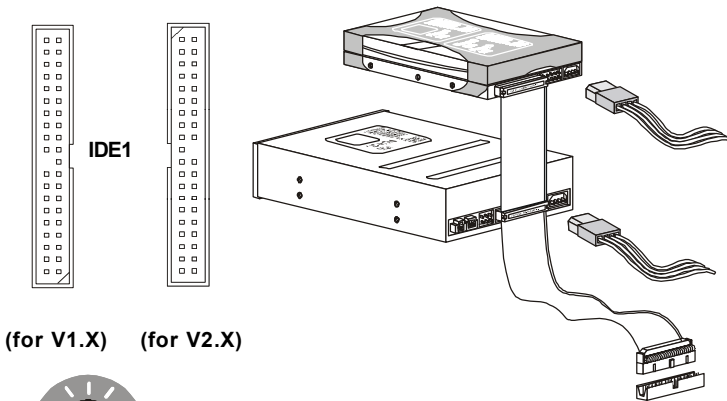


### Important

*If you install two IDE devices on the same cable, you must configure the drives separately to master / slave mode by setting jumpers. Refer to IDE device's documentation supplied by the vendors for jumper setting instructions.*

Serial ATA Connector: SATA1/ SATA2/ SATA3/ SATA4

This connector is a high-speed Serial ATA interface port. Each connector can connect to one Serial ATA device.

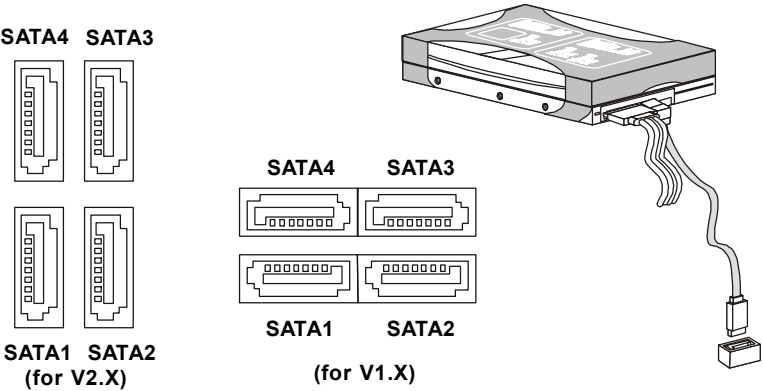


Important

Please do not fold the Serial ATA cable into 90-degree angle. Otherwise, data loss may occur during transmission.

Serial Port Connector: JCOM1 (for V2.X)

This connector is a 16550A high speed communication port that sends/receives 16 bytes FIFOs. You can attach a serial device.






Pin Definition

PIN	SIGNAL	DESCRIPTION
1	DCD	Data Carry Detect
2	SIN	Serial In or Receive Data
3	SOUT	Serial Out or Transmit Data
4	DTR	Data Terminal Ready
5	GND	Ground
6	DSR	Data Set Ready
7	RTS	Request To Send
8	CTS	Clear To Send
9	RI	Ring Indicate

## Fan Power Connectors: CPUFAN1, SYSFAN1, SYSFAN2

The fan power connectors support system cooling fan with +12V. When connecting the wire to the connectors, always note that the red wire is the positive and should be connected to the +12V; the black wire is Ground and should be connected to GND. If the mainboard has a System Hardware Monitor chipset on-board, you must use a specially designed fan with speed sensor to take advantage of the CPU fan control.

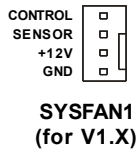

### Important

1. Please refer to the recommended CPU fans at processor's official website or consult the vendors for proper CPU cooling fan.
2. CPUFAN1/SYSFAN1 supports fan control. You can install **Dual Core Center** utility that will automatically control the CPU fan speed according to the actual CPU/System temperature.
3. Fan cooler set with 3 or 4 pins power connector are both available for CPUFAN/SYSFAN.


## Chassis Intrusion Connector: JC11

This connector connects to the chassis intrusion switch cable. If the chassis is opened, the chassis intrusion mechanism will be activated. The system will record this status and show a warning message on the screen. To clear the warning, you must enter the BIOS utility and clear the record.




S/PDIF-Out Connector: JSP1

This connector is used to connect S/PDIF (Sony & Philips Digital Interconnect Format) interface for digital audio transmission.

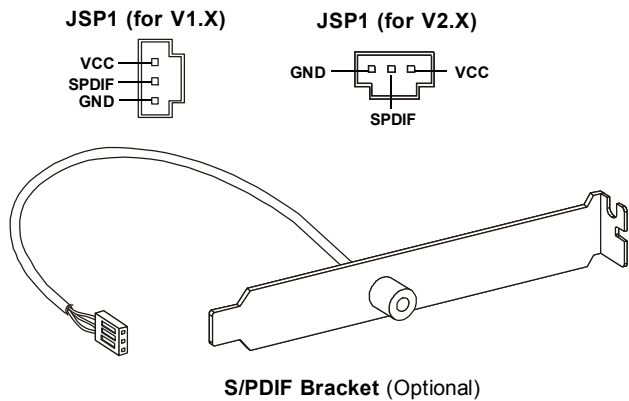


CD-In Connector: CD\_IN1

This connector is provided for external audio input.



Parallel Port Header: JTPM1(optional)


This connector connects to a TPM (Trusted Platform Module) module (optional)



Pin	Signal	Description	Pin	Signal	Description
1	LCLK	LPC clock	2	3V dual/3V_STB	3V dual or 3V standby power
3	LRST#	LPC reset	4	VCC3	3.3V power
5	LAD0	LPC address & data pin0	6	SIRQ	Serial IRQ
7	LAD1	LPC address & data pin1	8	VCC5	5V power
9	LAD2	LPC address & data pin2	10	KEY	No pin
11	LAD3	LPC address & data pin3	12	GND	Ground
13	LFRAME#	LPC Frame	14	GND	Ground

Front Panel Connectors: JFP1, JFP2

These connectors are for electrical connection to the front panel switches and LEDs. The JFP1 is compliant with Intel® Front Panel I/O Connectivity Design Guide.

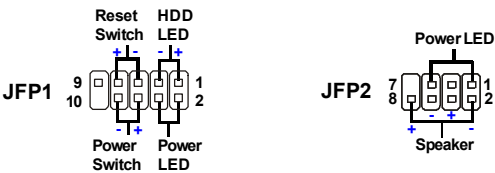

JFP1 Pin Definition

PIN	SIGNAL	DESCRIPTION
1	HD_LED +	Hard disk LED pull-up
2	FP PWR/SLP	MSG LED pull-up
3	HD_LED -	Hard disk active LED
4	FP PWR/SLP	MSG LED pull-up
5	RST_SW -	Reset Switch low reference pull-down to GND
6	PWR_SW +	Power Switch high reference pull-up
7	RST_SW +	Reset Switch high reference pull-up
8	PWR_SW -	Power Switch low reference pull-down to GND
9	RSVD_DNU	Reserved. Do not use.


JFP2 Pin Definition

PIN	SIGNAL	DESCRIPTION
1	GND	Ground
2	SPK-	Speaker-
3	SLED	Suspend LED
4	BUZ+	Buzzer+
5	PLED	Power LED
6	BUZ-	Buzzer-
7	NC	No connection
8	SPK+	Speaker+

JSPI Debugging Pin Header: JSPI1

The pin header is for internal debugging only.


JSPI1 Pin Definition



PIN	SIGNAL	PIN	SIGNAL
1	VCC3_SB	2	VCC3_SB
3	SPI_MISO	4	SPI_MOSI_F
5	SPI_CS0_F#	6	SPI_CLK_F
7	GND	8	GND
9	Reserved	10	NC

## Front Panel Audio Connector: JAUD1

This connector allows you to connect the front panel audio and is compliant with Intel® Front Panel I/O Connectivity Design Guide.




HD Audio Pin Definition

PIN	SIGNAL	DESCRIPTION
1	MIC_L	Microphone - Left channel
2	GND	Ground
3	MIC_R	Microphone - Right channel
4	PRESENCE#	Active low signal-signals BIOS that a High Definition Audio dongle is connected to the analog header. PRESENCE# = 0 when a High Definition Audio dongle is connected
5	LINE out_R	Analog Port - Right channel
6	MIC_JD	Jack detection return from front panel microphone JACK1
7	Front_JD	Jack detection sense line from the High Definition Audio CODEC jack detection resistor network
8	NC	No control
9	LINE out_L	Analog Port - Left channel
10	LINEout_JD	Jack detection return from front panel JACK2

## Parallel Port Header: JLPT1

This connector is used to connect an optional parallel port bracket. The parallel port is a standard printer port that supports Enhanced Parallel Port (EPP) and Extended Capabilities Parallel Port (ECP) mode.

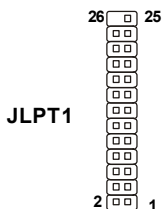


PIN	SIGNAL	PIN	SIGNAL	PIN	SIGNAL	PIN	SIGNAL
1	RSTB#	2	AFD#	15	PRND6	16	GND
3	PRND0	4	ERR#	17	PRND7	18	GND
5	PRND1	6	PINIT#	19	ACK#	20	GND
7	PRND2	8	LPT_SLIN#	21	BUSY	22	GND
9	PRND3	10	GND	23	PE	24	GND
11	PRND4	12	GND	25	SLCT	26	Key (No Pin)
13	PRND5	14	GND				


Front USB Connector: JUSB1 / JUSB2


This connector, compliant with Intel® I/O Connectivity Design Guide, is ideal for connecting high-speed USB interface peripherals such as **USB HDD, digital cameras, MP3 players, printers, modems and the like.**

**JUSB1/2**



PIN	SIGNAL	PIN	SIGNAL
1	VCC	2	VCC
3	USB0-	4	USB1-
5	USB0+	6	USB1+
7	GND	8	GND
9	Key (no pin)	10	USBOC

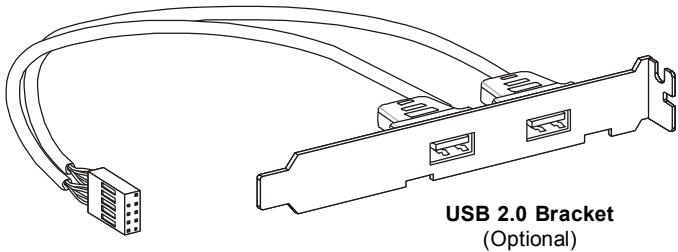




**Important**

*Note that the pins of VCC and GND must be connected correctly to avoid possible damage.*




IEEE1394 Connector: J1394\_1(optional for V2.X)

This connector allows you to connect the IEEE1394 device via an optional IEEE1394 bracket.



Pin Definition			
PIN	SIGNAL	PIN	SIGNAL
1	TPA+	2	TPA-
3	Ground	4	Ground
5	TPB+	6	TPB-
7	Cable power	8	Cable power
9	Key (no pin)	10	Ground

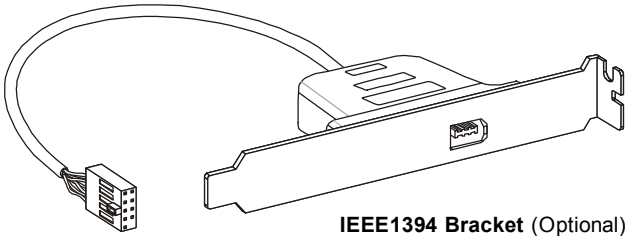

IEEE1394 Bracket (Optional)

## Jumpers

### Clear CMOS Jumper: JBAT1

There is a CMOS RAM onboard that has a power supply from an external battery to keep the data of system configuration. With the CMOS RAM, the system can automatically boot OS every time it is turned on. If you want to clear the system configuration, set the jumper to clear data.

**JBAT1**  
(for V1.X)



Keep Data



Clear Data

**JBAT1**  
(for V2.X)



Keep Data



Clear Data



### Important

*You can clear CMOS by shorting 2-3 pin while the system is off. Then return to 1-2 pin position. Avoid clearing the CMOS while the system is on; it will damage the mainboard.*


## Slots

### PCI (Peripheral Component Interconnect) Express Slot


The PCI Express slot supports the PCI Express interface expansion card.

The PCI Express x 16 slot supports up to 4.0 GB/s transfer rate. (If your mainboard has the DVI port, this PCIE slot can only support up to x8(2.0GB/s) transfer rate).

The PCI Express x 1 slot supports up to 250 MB/s transfer rate.



PCI Express x16 Slot



PCI Express x1 Slot  
(for V1.X)

### PCI (Peripheral Component Interconnect) Slot

The PCI slot supports LAN card, SCSI card, USB card, and other add-on cards that comply with PCI specifications.



32-bit PCI Slot



#### Important

*When adding or removing expansion cards, make sure that you unplug the power supply first. Meanwhile, read the documentation for the expansion card to configure any necessary hardware or software settings for the expansion card, such as jumpers, switches or BIOS configuration.*

## PCI Interrupt Request Routing

The IRQ, acronym of interrupt request line and pronounced I-R-Q, are hardware lines over which devices can send interrupt signals to the microprocessor. The PCI IRQ pins are typically connected to the PCI bus pins as follows:

### For V1.X

	Order 1	Order 2	Order 3	Order 4
PCI Slot 1	INT A#	INT B#	INT C#	INT D#
PCI Slot 2	INT B#	INT C#	INT D#	INT A#

### For V2.X

	Order 1	Order 2	Order 3	Order 4
PCI Slot 1	INT A#	INT B#	INT C#	INT D#
PCI Slot 2	INT B#	INT C#	INT D#	INT A#
PCI Slot 3	INT C#	INT D#	INT A#	INT B#

## Chapter 3

# BIOS Setup

This chapter provides information on the BIOS Setup program and allows you to configure the system for optimum use.

You may need to run the Setup program when:

- ≈ An error message appears on the screen during the system booting up, and requests you to run SETUP.
- ≈ You want to change the default settings for customized features.

## Entering Setup

Power on the computer and the system will start POST (Power On Self Test) process. When the message below appears on the screen, press <DEL> key to enter Setup.

### Press DEL to enter SETUP

If the message disappears before you respond and you still wish to enter Setup, restart the system by turning it OFF and On or pressing the RESET button. You may also restart the system by simultaneously pressing <Ctrl>, <Alt>, and <Delete> keys.



### Important

1. *The items under each BIOS category described in this chapter are under continuous update for better system performance. Therefore, the description may be slightly different from the latest BIOS and should be held for reference only.*
2. *Upon boot-up, the 1st line appearing after the memory count is the BIOS version. It is usually in the format:*

*A7383IMS V1.0 070707 where:*

*1st digit refers to BIOS maker as A = AMI, W = AWARD, and P = PHOENIX.*

*2nd - 5th digit refers to the model number.*

*6th digit refers to the chipset as I = Intel, N = nVidia, and V = VIA.*

*7th - 8th digit refers to the customer as MS = all standard customers.*

*V1.1 refers to the BIOS version.*

*070707 refers to the date this BIOS was released.*

## Control Keys

<↑>	Move to the previous item
<↓>	Move to the next item
<←>	Move to the item in the left hand
<→>	Move to the item in the right hand
<Enter>	Select the item
<Esc>	Jumps to the Exit menu or returns to the main menu from a submenu
<+/PU>	Increase the numeric value or make changes
<-/PD>	Decrease the numeric value or make changes
<F6>	Load Optimized Defaults
<F10>	Save all the CMOS changes and exit

## Getting Help

After entering the Setup menu, the first menu you will see is the Main Menu.

### Main Menu

The main menu lists the setup functions you can make changes to. You can use the arrow keys ( ↑↓ ) to select the item. The on-line description of the highlighted setup function is displayed at the bottom of the screen.

### Sub-Menu

If you find a right pointer symbol (as shown in the right view) appears to the left of certain fields that means a sub-menu can be launched from this field. A sub-menu contains additional options for a field parameter. You can use arrow keys ( ↑↓ ) to highlight the field and press <Enter> to call up the sub-menu. Then you can


- ▶ Primary IDE Master
- ▶ Primary IDE Slave
- ▶ Secondary IDE Master
- ▶ Secondary IDE Slave

use the control keys to enter values and move from field to field within a sub-menu. If you want to return to the main menu, just press the <Esc>.

### General Help <F1>

The BIOS setup program provides a General Help screen. You can call up this screen from any menu by simply pressing <F1>. The Help screen lists the appropriate keys to use and the possible selections for the highlighted item. Press <Esc> to exit the Help screen.

## The Main Menu

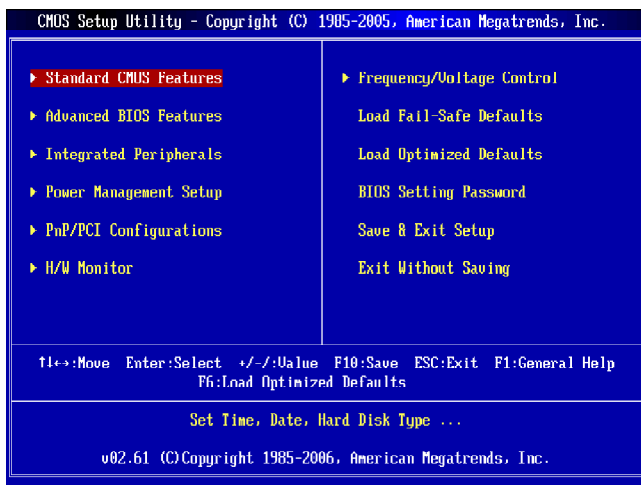

### ► Standard CMOS Features

Use this menu for basic system configurations, such as time, date etc.

### ► Advanced BIOS Features

Use this menu to setup the items of AMI® special enhanced features.

### ► Integrated Peripherals

Use this menu to specify your settings for integrated peripherals.

### ► Power Management Setup

Use this menu to specify your settings for power management.

### ► PNP/PCI Configurations

This entry appears if your system supports PnP/PCI.

### ► H/W Monitor

This entry shows your PC health status.

### ► Frequency/Voltage Control

Use this menu to specify your settings for frequency/voltage control and overclocking.

### ► Load Fail-Safe Defaults

Use this menu to load the default values set by the BIOS vendor for stable system performance.



► **Load Optimized Defaults**

Use this menu to load the default values set by the mainboard manufacturer specifically for optimal performance of the mainboard.

► **BIOS Setting Password**

Use this menu to set the password for BIOS.

► **Save & Exit Setup**


Save changes to CMOS and exit setup.

► **Exit Without Saving**

Abandon all changes and exit setup.

## Standard CMOS Features

The items in Standard CMOS Features Menu includes some basic setup items. Use the arrow keys to highlight the item and then use the <PgUp> or <PgDn> keys to select the value you want in each item.

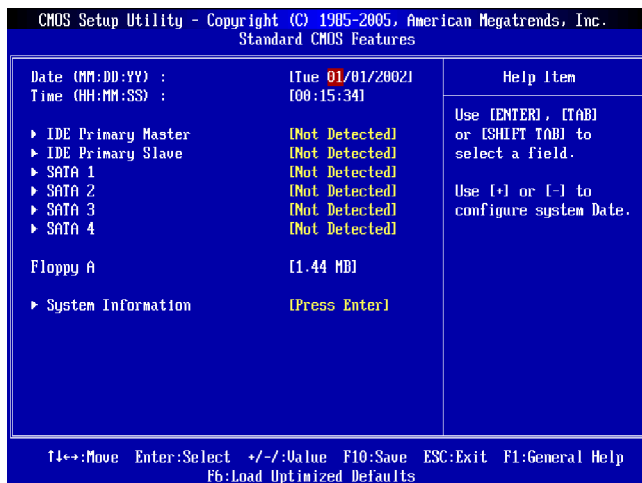

### ► Date (MM:DD:YY)

This allows you to set the system to the date that you want (usually the current date). The format is <day><month> <date> <year>.

<b>day</b>	Day of the week, from Sun to Sat, determined by BIOS. Read-only.
<b>month</b>	The month from Jan. through Dec.
<b>date</b>	The date from 1 to 31 can be keyed by numeric function keys.
<b>year</b>	The year can be adjusted by users.

### ► Time (HH:MM:SS)

This allows you to set the system time that you want (usually the current time). The time format is <hour> <minute> <second>.

### ► IDE Primary Master/Slave, SATA1~4

Press <Enter> to enter the sub-menu, and the following screen appears.

SATA3		Help Item
Device	:Hard Disk	Disabled: Disables LBA Mode. Auto: Enables LBA Mode if the device supports it and the device is not already formatted with LBA Mode disabled.
Vendor	:HDS728080PLA380	
Size	:82.3GB	
LBA/Large Mode	[Auto]	
DMA Mode	[Auto]	
Hard Disk S.M.A.R.T.	[Auto]	

#### ► Device / Vendor / Size

It will showing the device information that you connected to the SATA connector.

#### ► LBA/Large Mode

This allows you to enable or disable the LBA Mode. Setting to Auto enables LBA mode if the device supports it and the devices is not already formatted with LBA mode disabled.

#### ► DMA Mode

Select DMA Mode.

#### ► Hard Disk S.M.A.R.T.

This allows you to activate the S.M.A.R.T. (Self-Monitoring Analysis & Reporting Technology) capability for the hard disks. S.M.A.R.T is a utility that monitors your disk status to predict hard disk failure. This gives you an opportunity to move data from a hard disk that is going to fail to a safe place before the hard disk becomes offline.



### Important

**IDE Primary Master/Slave and Serial-ATA 1/2/3/4 Channels** are appearing when you connect the HD devices to the IDE/ SATA connector on the mainboard.

#### ► Floppy A

This item allows you to set the type of floppy drives installed. Available options: [None], [360K, 5.25 in.], [1.2M, 5.25 in.], [720K, 3.5 in.], [1.44M, 3.5 in.], [2.88M, 3.5 in.].


**► System Information**

Press <Enter> to enter the sub-menu, and the following screen appears.

CMOS Setup Utility - Copyright (C) 1985-2005, American Megatrends, Inc.		
System Information		
Intel(R) Core(TM)2 CPU	6300 @ 1.86GHz	Help Item
CPU ID/MicroCode	06F5h/00h	
CPU Frequency	1.86GHz (266x7)	
BIOS Version	00.000 030007	
Physical Memory	512MB	
Usage Memory	512MB	
Cache Size	2048 KB	
F4<=>:Move Enter:Select +/-:Value F10:Save ESC:Exit F1:General Help		
F6:Load Optimized Defaults		

This sub-menu shows the CPU information, BIOS version and memory status of your system (read only).

## Advanced BIOS Features

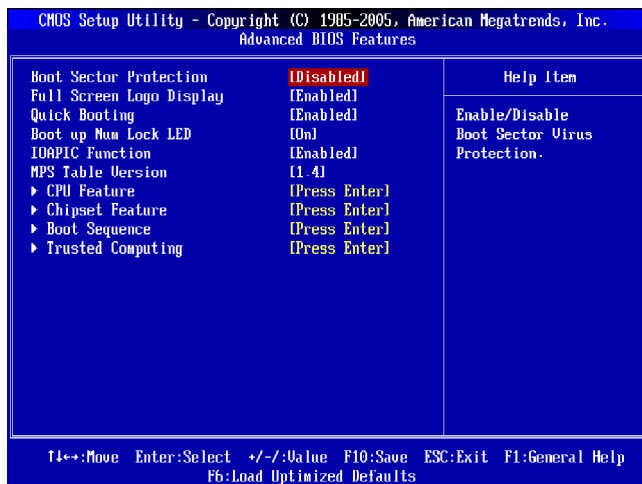

### ▶ Full Screen LOGO Display

This item enables you to show the company logo on the bootup screen. Settings are:

- [Enabled] Shows a still image (logo) on the full screen at boot.
- [Disabled] Shows the POST messages at boot.

### ▶ Quick Booting

Setting the item to [Enabled] allows the system to boot within 10 seconds since it will skip some check items.

### ▶ Boot Up Num-Lock LED

This setting is to set the Num Lock status when the system is powered on. Setting to [On] will turn on the Num Lock key when the system is powered on. Setting to [Off] will allow users to use the arrow keys on the numeric keypad.

### ▶ IOAPIC Function


This field is used to enable or disable the APIC (Advanced Programmable Interrupt Controller). Due to compliance with PC2001 design guide, the system is able to run in APIC mode. Enabling APIC mode will expand available IRQ resources for the system.

### ► MPS Table Version

This field allows you to select which MPS (Multi-Processor Specification) version to be used for the operating system. You need to select the MPS version supported by your operating system. To find out which version to use, consult the vendor of your operating system.

### ► CPU Feature

Press <Enter> to enter the sub-menu and the following screen appears:



### ► Hyper-Threading Technology

This field appears only when the CPU supports Hyper-Threading. The processor uses Hyper-Threading technology to increase transaction rates and reduces end-user response times. The technology treats the two cores inside the processor as two logical processors that can execute instructions simultaneously. In this way, the system performance is highly improved. If you disable the function, the processor will use only one core to execute the instructions.

### ► Execute Bit Support

Intel's Execute Disable Bit functionality can prevent certain classes of malicious "buffer overflow" attacks when combined with a supporting operating system. This functionality allows the processor to classify areas in memory by where application code can execute and where it cannot. When a malicious worm attempts to insert code in the buffer, the processor disables code execution, preventing damage or worm propagation.

### ► Set Limit CPUID MaxVal to 3

The Max CPUID Value Limit is designed to limit the listed speed of the processor to older operating systems.

### ► Chipset Feature

Press <Enter> to enter the sub-menu and the following screen appears:



### ► HPET

The HPET (High Precision Event Timers) is a component that is part of the chipset. You can enable it, and will provide you with the means to get to it via the various ACPI methods.

### ► VGA Share Memory Size

The system shares memory to the onboard VGA card. This setting controls the exact memory size shared to the VGA card.

### ► DVMT Mode Select

This item allows you to set the mode for the graphics core..

[Fixed Mode], a fixed-size fragment of the system memory is allocated to the graphics core. It can only be used by the graphics core.

[DVMT Mode], the driver of the graphics core uses the system memory like any other OS component or application does.

### ► DVMT/FIXED Memory

Specify the size of DVMT memory to allocate for video memory.

### ► Boot Sequence

Press <Enter> to enter the sub-menu and the following screen appears:

CMOS Setup Utility - Copyright (C) 1985-2005, American Megatrends, Inc.		
Boot Sequence		
1st Boot Device	[1st FLOPPY DRIVE]	Help Item
Boot From Other Device	[Yes]	Specifies the boot

### ► 1st Boot Device

The items allow you to set the first boot device where BIOS attempts to load the disk operating system.

### ► Boot From Other Device

Setting the option to [Yes] allows the system to try to boot from other device. if the system fails to boot from the 1st/ 2nd/ 3rd boot device.

### ► Trusted Computing

Press <Enter> to enter the sub-menu and the following screen appears:

CMOS Setup Utility - Copyright (C) 1985-2005, American Megatrends, Inc.		
Trusted Computing		
Trusted Computing		Help Item
TCG/TPM SUPPORT	[Yes]	Enable/Disable TPM
TPM Enable/Disable Status	[No State]	TCG (TPM 1.1/1.2) supp
TPM Owner Status	[No State]	in BIOS


### ► TCG/TPM SUPPORT

This field is used to enable or disable TPM (Trusted Platform Module) support in BIOS.

### ► TPM Enable/Disable status, TPM Owner Status

These items show the status of TPM (read only).

## Integrated Peripherals

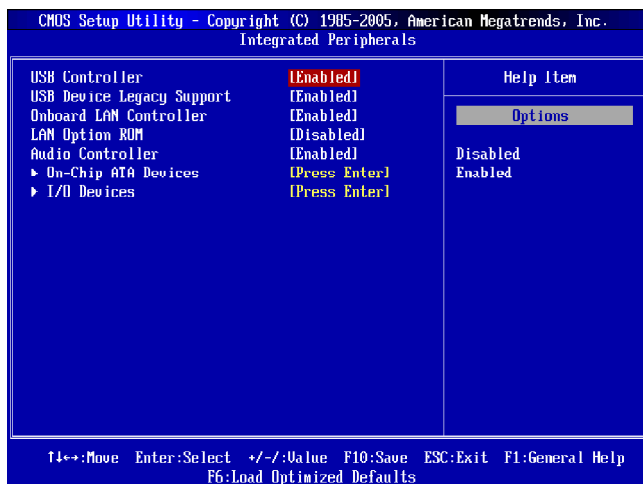

### ► USB Controller

This setting allows you to enable/disable the onboard USB controller.

### ► USB Device Legacy Support

Select [Enabled] if you need to use a USB-interfaced device in the operating system.

### ► Onboard LAN Controller

This item is used to enable/disable the onboard LAN controller.

### ► LAN Option ROM

This item is used to decide whether to invoke the Boot ROM of the LAN controller.

### ► Audio Controller

This setting is used to enable/disable the onboard audio controller.

### ► On-Chip ATA Devices

Press <Enter> to enter the sub-menu and the following screen appears:





### ► On-Chip IDE Controller

These items allow users to enable or disable the IDE controller.

### ► PCI IDE BusMaster

This item allows you to enable/ disable BIOS to used PCI busmastering for reading/ writing to IDE drives.

### ► On-Chip SATA Controller

These items allow users to enable or disable the SATA controller.

### ► I/O Device

Press <Enter> to enter the sub-menu and the following screen appears:

CMOS Setup Utility - Copyright (C) 1985-2005, American Megatrends, Inc.		
I/O Devices		
COM Port 1	[3F8/IRQ4]	Help Item
Parallel Port	[378]	
Parallel Port Mode	[BI-Direction]	Allows BIOS to Select
Parallel Port IRQ	[IRQ7]	Serial Port1 Base
		Address

### ► COM Port 1

Select an address and corresponding interrupt for the first serial port.

### ► Parallel Port

This item allows you to set parallel port.


### ► Parallel Port Mode

This item allows you to select the parallel port mode.

### ► Parallel IRQ

This item allows you to set parallel IRQ.

## Power Management Setup

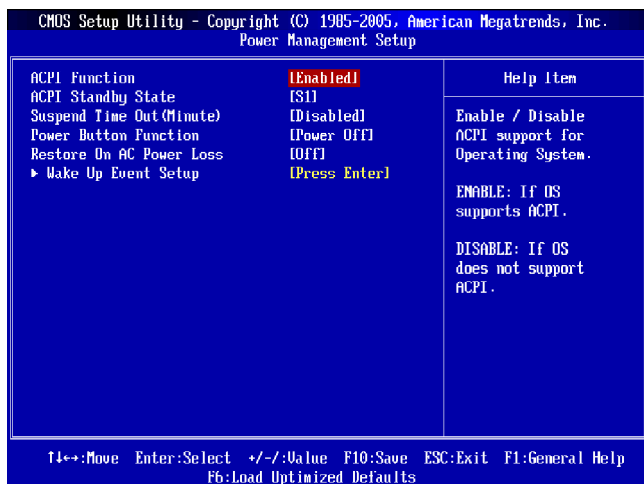

### Important

*S3-related functions described in this section are available only when your BIOS supports S3 sleep mode.*

#### ► ACPI Function

This item is to activate the ACPI (Advanced Configuration and Power Management Interface) Function. If your operating system is ACPI-aware, such as Windows 2000/XP, select [Enabled].

#### ► ACPI Standby State

This item specifies the power saving modes for ACPI function. If your operating system supports ACPI, such as Windows 2000/XP, you can choose to enter the Standby mode in S1(POS) or S3(STR) fashion through the setting of this field. Settings are:

- [S1] The S1 sleep mode is a low power state. In this state, no system context is lost (CPU or chipset) and hardware maintains all system context.
- [S3] The S3 sleep mode is a lower power state where the information of system configuration and open applications/files is saved to main memory that remains powered while most other hardware components turn off to save energy. The information stored in memory will be used to restore the system when a "wake up" event occurs.

### ► Suspend Time Out (Minute)

If system activity is not detected for the length of time specified in this field, all devices except CPU will be shut off.

### ► Power Button Function

This feature sets the function of the power button. Settings are:

- [On/ Off]      The power button functions as normal power off button.
- [Suspend]      When you press the power button, the computer enters the suspend/sleep mode, but if the button is pressed for more than four seconds, the computer is turned off.

### ► Restore On AC Power Loss

This item specifies whether your system will reboot after a power failure or interrupt occurs. Settings are:

- [Off]            Always leaves the computer in the power off state.
- [On]            Always leaves the computer in the power on state.
- [Last State]   Restores the system to the status before power failure or interrupt occurred.

### ► Wakeup Event Setup

Press <Enter> and the following sub-menu appears.

CMOS Setup Utility - Copyright (C) 1985-2005, American Megatrends, Inc.		
Wake Up Event Setup		
Resume From S3 By USB Device	[Disabled]	Help Item Enable/Disable USB Device Wakeup From S3.
Resume From S3 By PS/2 Keyboard	[Disabled]	
Specific Key for PowerOn	[Press Enter]	
Resume From S3 By PS/2 Mouse	[Disabled]	
Resume By PCI Device (PME#)	[Enabled]	
Resume By PCI-E Device	[Enabled]	
Resume By RTC Alarm	[Disabled]	

### ► Resume From S3 By USB Device

The item allows the activity of the USB device to wake up the system from S3 (Suspend to RAM) sleep state.

### ► Resume From S3 By PS/2 Keyboard

This setting determines whether the system will be awakened from what power saving modes when input signal of the PS/2 keyboard is detected.

### ► Keyboard PowerOn Function

The item allows you use specific key from keyboard to power on the system.

### ► Resume From S3 By PS/2 Mouse

This setting determines whether the system will be awakened from what power saving modes when input signal of the PS/2 mouse is detected.

### ► Resume by PCI Device (PME#)

When set to [Enabled], the feature allows your system to be awakened from the power saving modes through any event on PME (Power Management Event).

► **Resume by PCI-E Device**

When set to [Enabled], the feature allows your system to be awakened from the power saving modes through any event on PCIE device.

► **Resume by RTC Alarm**

The field is used to enable or disable the feature of booting up the system on a scheduled time/date.

## PNP/PCI Configurations

This section describes configuring the PCI bus system and PnP (Plug & Play) feature. PCI, or **P**eripheral **C**omponent Interconnect, is a system which allows I/O devices to operate at speeds nearing the speed the CPU itself uses when communicating with its special components. This section covers some very technical items and it is strongly recommended that only experienced users should make any changes to the default settings.



### ► Primary Graphic's Adapter

This setting specifies which graphics card is your primary graphics adapter.

### ► PCI Latency Timer


This item controls how long each PCI device can hold the bus before another takes over. When set to higher values, every PCI device can conduct transactions for a longer time and thus improve the effective PCI bandwidth. For better PCI performance, you should set the item to higher values.

### ► PCI Slot 1/ 2 IRQ

These items specify the IRQ line for each PCI slot.

► **IRQ Resource Setup**

Press <Enter> to enter the sub-menu and the following screen appears.

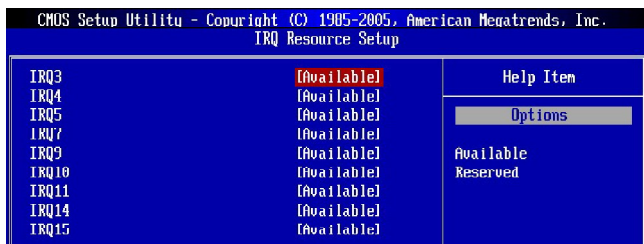► **IRQ 3/4/5/7/9/10/11/14/15**


These items specify the bus where the specified IRQ line is used.

The settings determine if AMIBIOS should remove an IRQ from the pool of available IRQs passed to devices that are configurable by the system BIOS. The available IRQ pool is determined by reading the ESCD NVRAM. If more IRQs must be removed from the IRQ pool, the end user can use these settings to reserve the IRQ by assigning an [Reserved] setting to it. Onboard I/O is configured by AMIBIOS. All IRQs used by onboard I/O are configured as [Available]. If all IRQs are set to [Reserved], and IRQ 14/15 are allocated to the onboard PCI IDE, IRQ 9 will still be available for PCI and PnP devices.

**Important**

*IRQ (Interrupt Request) lines are system resources allocated to I/O devices. When an I/O device needs to gain attention of the operating system, it signals this by causing an IRQ to occur. After receiving the signal, when the operating system is ready, the system will interrupt itself and perform the service required by the I/O device.*

## H/W Monitor

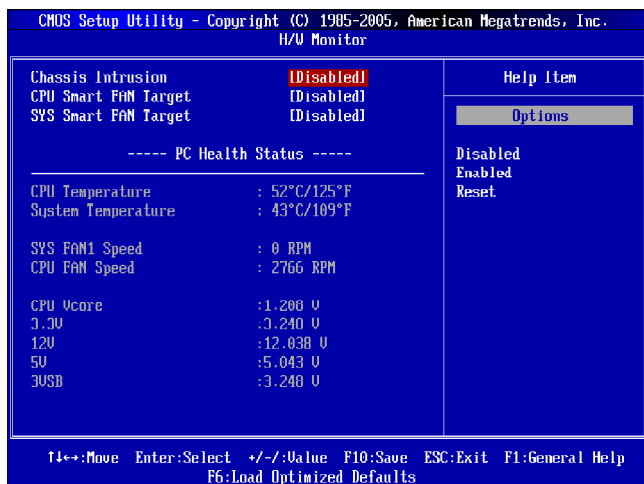

### ► Chassis Intrusion

The field enables or disables the feature of recording the chassis intrusion status and issuing a warning message if the chassis is once opened. To clear the warning message, set the field to [Reset]. The setting of the field will automatically return to [Enabled] later.

### ► CPU/SYS Smart FAN Target


The mainboard provides the Smart Fan function which can control the CPU/System fan speed automatically depending on the current temperature to keep it with in a specific range. You can select a fan target value here. If the current CPU/System fan temperature reaches to the target value, the smart fan function will be activated. It provides several sections to speed up for cooling down automatically .

### ► PC Health Status

#### ► CPU/ System Temperature, CPU FAN/ SYS FAN1 Speed, CPU Vcore, 3.3V, 5V, 12V, 3VSB

These items display the current status of all of the monitored hardware devices/ components such as CPU voltage, temperatures and all fans' speeds.

## Frequency/Voltage Control

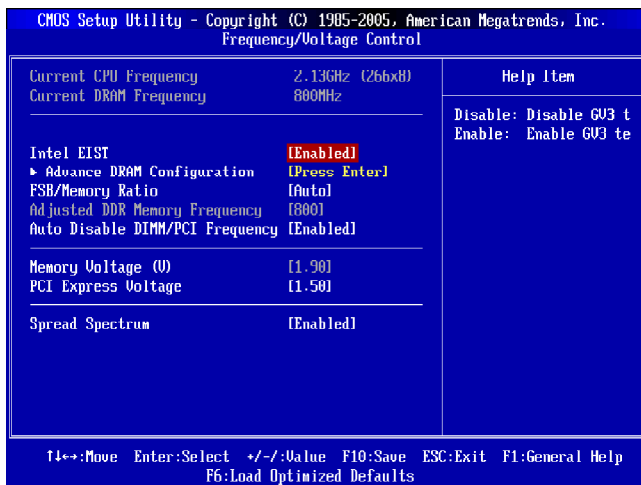

### Important

*Change these settings only if you are familiar with the chipset.*

#### ► Current CPU / DRAM Frequency


These items show the current clocks of CPU and Memory speed. Read-only.

#### ► Intel EIST

The Enhanced Intel SpeedStep technology allows you to set the performance level of the microprocessor whether the computer is running on battery or AC power. This field will appear after you installed the CPU which support speedstep technology.

#### ► Advance DRAM Configuration

Press <Enter> to enter the sub-menu and the following screen appears.

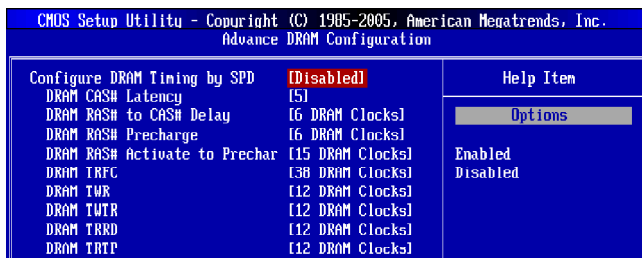



**► Configuration DRAM Timing by SPD**

Setting to [Enabled] enables DRAM CAS# Latency automatically to be determined by BIOS based on the configurations on the SPD (Serial Presence Detect) EEPROM on the DRAM module.

**► DRAM CAS# Latency**

When the **Configuration DRAM Timing by SPD** sets to [Disabled], the field is adjustable. This controls the CAS latency, which determines the timing delay (in clock cycles) before SDRAM starts a read command after receiving it.

**► DRAM RAS# to CAS# Delay**

When the **Configuration DRAM Timing by SPD** sets to [Disabled], the field is adjustable. When DRAM is refreshed, both rows and columns are addressed separately. This setup item allows you to determine the timing of the transition from RAS (row address strobe) to CAS (column address strobe). The less the clock cycles, the faster the DRAM performance.

**► DRAM RAS# Precharge**

When the **Configuration DRAM Timing by SPD** sets to [Disabled], this field is adjustable. This setting controls the number of cycles for Row Address Strobe (RAS) to be allowed to precharge. If insufficient time is allowed for the RAS to accumulate its charge before DRAM refresh, refresh may be incomplete and DRAM may fail to retain data. This item applies only when synchronous DRAM is installed in the system.

**► DRAM RAS# Activate to Precharge**

When the **Configuration DRAM Timing by SPD** sets to [Disabled], this field is adjustable. This item controls the number of cycles for Row Address Strobe (RAS) to be allowed to precharge. If insufficient time is allowed for the RAS to accumulate its charge before DRAM refresh, refresh may be incomplete and DRAM may fail to retain data. This item applies only when synchronous DRAM is installed in the system.

**► DRAM TRFC**

When the **Configuration DRAM Timing by SPD** sets to [Disabled], the field is adjustable. This setting determines the time RFC takes to read from and write to a memory cell.

**► DRAM TWR**

When the **Configuration DRAM Timing by SPD** sets to [Disabled], the field is adjustable. Minimum time interval between end of write data burst and the start of a precharge command. Allows sense amplifiers to restore data to cells.

**► DRAM TWTR**

When the **Configuration DRAM Timing by SPD** sets to [Disabled], the field is adjustable. Minimum time interval between the end of write data burst and the start of a column-read command. It allows I/O gating to overdrive sense amplifiers before read command starts.

**► DRAM TRRD**

When the **Configuration DRAM Timing by SPD** sets to [Disabled], the field is adjustable. Specifies the active-to-active delay of different banks. Time interval between a read and a precharge command.

**► DRAM TRTP**

When the **Configuration DRAM Timing by SPD** sets to [Disabled], the field is adjustable. Time interval between a read and a precharge command.

**► FSB/Memory Ratio**

This item will allow you to adjust the FSB/Ratio of the memory.

**► Adjusted DDR Memory Frequency**

It shows the adjusted DDR memory frequency. Read-only.

**► Auto Disable DIMM/PCI Frequency**

When set to [Enabled], the system will remove (turn off) clocks from empty DIMM and PCI slots to minimize the electromagnetic interference (EMI).

**► Memory Voltage (V)**

This item will allow you to adjust the Memory voltage.

**► PCI Express Voltage**

This item will allow you to adjust the PCI Express voltage.

**► Spread Spectrum**

When the motherboard's clock generator pulses, the extreme values (spikes) of the pulses create EMI (Electromagnetic Interference). The Spread Spectrum function reduces the EMI generated by modulating the pulses so that the spikes of the pulses are reduced to flatter curves. If you do not have any EMI problem, leave the setting at Disabled for optimal system stability and performance. But if you are plagued by EMI, set to Enabled for EMI reduction. Remember to disable Spread Spectrum if you are overclocking because even a slight jitter can introduce a temporary boost in clock speed which may just cause your overclocked processor to lock up.

**Important**

1. If you do not have any EMI problem, leave the setting at [Disabled] for optimal system stability and performance. But if you are plagued by EMI, select the value of Spread Spectrum for EMI reduction.
2. The greater the Spread Spectrum value is, the greater the EMI is reduced, and the system will become less stable. For the most suitable Spread Spectrum value, please consult your local EMI regulation.
3. Remember to disable Spread Spectrum if you are overclocking because even a slight jitter can introduce a temporary boost in clock speed which may just cause your overclocked processor to lock up.

## Load Fail-Safe/ Optimized Defaults

The two options on the main menu allow users to restore all of the BIOS settings to the default Fail-Safe or Optimized values. The Optimized Defaults are the default values set by the mainboard manufacturer specifically for optimal performance of the mainboard. The Fail-Safe Defaults are the default values set by the BIOS vendor for stable system performance.

When you select Load Fail-Safe Defaults, a message as below appears:



Pressing Y loads the BIOS default values for the most stable, minimal system performance.

When you select Load Optimized Defaults, a message as below appears:



Pressing Y loads the default factory settings for optimal system performance.

## **BIOS Setting Password**

When you select this function, a message as below will appear on the screen:



Type the password, up to six characters in length, and press <Enter>. The password typed now will replace any previously set password from CMOS memory. You will be prompted to confirm the password. Retype the password and press <Enter>. You may also press <Esc> to abort the selection and not enter a password.

To clear a set password, just press <Enter> when you are prompted to enter the password. A message will show up confirming the password will be disabled. Once the password is disabled, the system will boot and you can enter Setup without entering any password.

When a password has been set, you will be prompted to enter it every time you try to enter Setup. This prevents an unauthorized person from changing any part of your system configuration.

## *Appendix A*

### *Realtek ALC888 Audio*

The Realtek ALC888 provides 10-channel DAC that simultaneously supports 7.1 sound playback and 2 channels of independent stereo sound output (multiple streaming) through the Front-Out-Left and Front-Out-Right channels.

## Installing the Realtek HD Audio Driver


You need to install the driver for Realtek ALC888 codec to function properly before you can get access to 2-, 4-, 6-, 8- channel or 7.1+2 channel audio operations. Follow the procedures described below to install the drivers for different operating systems.

### Installation for Windows 2000/XP/Vista

For Windows® 2000, you must install Windows® 2000 Service Pack4 or later before installing the driver. For Windows® XP, you must install Windows® XP Service Pack1 or later before installing the driver.

The following illustrations are based on Windows® XP environment and could look slightly different if you install the drivers in different operating systems.


1. Insert the application CD into the CD-ROM drive. The setup screen will automatically appear.
2. Click **Realtek HD Audio Driver**.

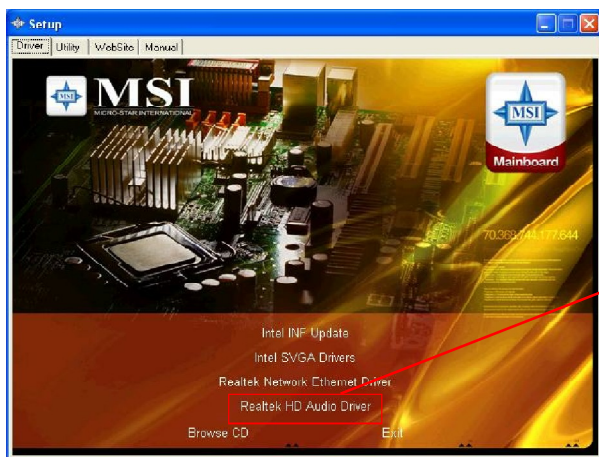


Click here




### Important

**The HD Audio Configuration**  software utility is under continuous update to enhance audio applications. Hence, the program screens shown here in this section may be slightly different from the latest software utility and shall be held for reference only.


3. Click **Next** to install the Realtek High Definition Audio Driver.

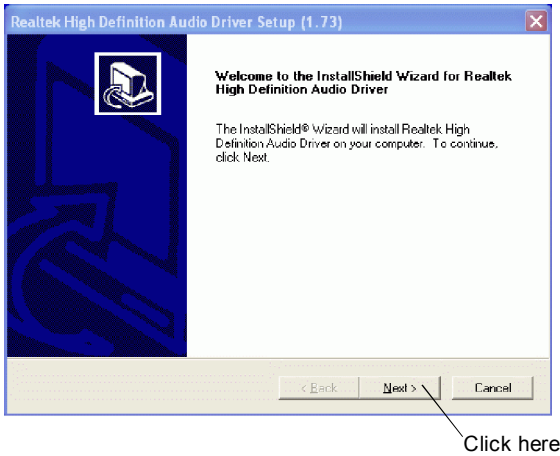


4. Click **Finish** to restart the system.

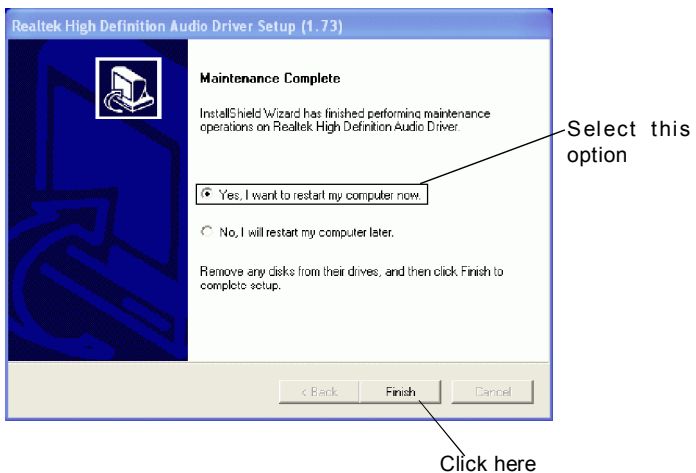


### Software Configuration

After installing the audio driver, you are able to use the 2-, 4-, 6- or 8- channel audio feature now. Click the audio icon  from the system tray at the lower-right corner of the screen to activate the **HD Audio Configuration**. It is also available to enable the audio driver by clicking the **Realtek HD Audio Manager** from the **Control Panel**.



Double click

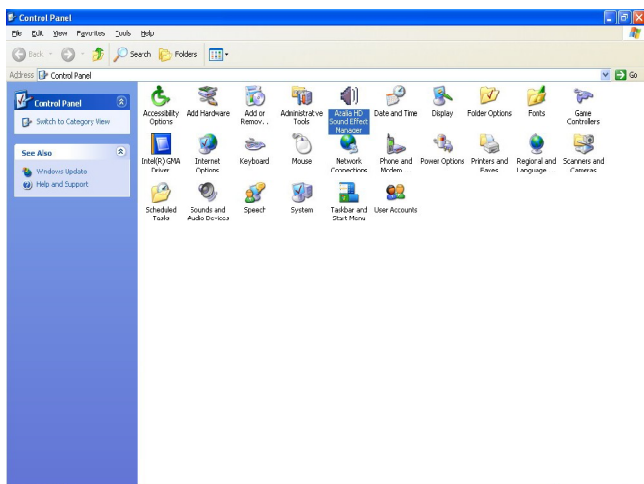



## Sound Effect

Here you can select a sound effect you like from the **Environment** list.



### Environment Simulation

You will be able to enjoy different sound experience by pulling down the arrow, totally 23 kinds of sound effect will be shown for selection. Realtek HD Audio Sound Manager also provides five popular settings “Stone Corridor”, “Bathroom”, “Sewer pipe”, “Arena” and “Audio Corridor” for quick enjoyment.


You may choose the provided sound effects, and the equalizer will adjust automatically. If you like, you may also load an equalizer setting or make an new equalizer setting to save as an new one by using the “**Load EQ Setting**” and “**Save Preset**” button, click “**Reset EQ Setting**” button to use the default value, or click “**Delete EQ Setting**” button to remove a preset EQ setting.

There are also other pre-set equalizer models for you to choose by clicking “**Others**” under the **Equalizer** part.

### Equalizer Selection

Equalizer frees users from default settings; users may create their own preferred settings by utilizing this tool.

10 bands of equalizer, ranging from 100Hz to 16KHz.

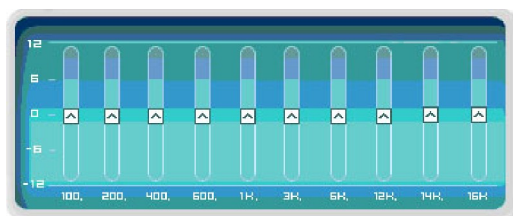

#### **Save**

The settings are saved permanently for future use

#### **Reset**

10 bands of equalizer would go back to the default setting

#### **Enable / Disable**

To disable, you can temporarily stop the sound effect without losing the settings

#### **Load**

Whenever you would like to use preload settings, simply click this, the whole list will be shown for your selection.

#### **Delete**

To delete the pre-saved settings which are created from previous steps.



### Frequently Used Equalizer Setting

Realtek recognizes the needs that you might have. By leveraging our long experience at audio field, Realtek HD Audio Sound Manager provides you certain optimized equalizer settings that are frequently used for your quick enjoyment.


[How to Use It]

Other than the buttons “Pop” “Live” “Club” & “Rock” shown on the page, to pull down the arrow in “Others”, you will find more optimized settings available to you.

### Karaoke Mode

Karaoke mode brings Karaoke fun back home. Simply using the music you usually play, Karaoke mode can help you eliminate the vocal of the song or adjust the key to accommodate your range.

- 1.Vocal Cancellation: Single click on “Voice Cancellation”, the vocal of the song would be eliminated, while the background music is still in place, and you can be that singer!
- 2.Key Adjustment: Using “Up / Down Arrow” to find a key which better fits your vocal range.

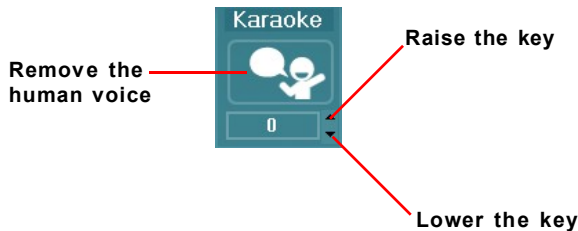

## Mixer

In the **Mixer** part, you may adjust the volumes of the rear and front panels individually.

### 1. Adjust Volume

You can adjust the volume of the speakers that you plugged in front or rear panel by select the **Realtek HD Audio rear output** or **Realtek HD Audio front output** items.




### Important

*Before set up, please make sure the playback devices are well plugged in the jacks on the rear or front panel. The **Realtek HD Audio front output** item will appear after you plugging the speakers into the jacks on the front panel.*

### 2. Multi-Stream Function


ALC888 supports an outstanding feature called Multi-Stream, which means you may play different audio sources simultaneously and let them output respectively from the indicated rear panel or front panel. This feature is very helpful when 2 people are using the same computer together for different purposes.

Click the  button and the Mixer **ToolBox** menu will appear. Then check the **Enable playback multi-streaming** and click **OK** to save the setup.



### Important

*You have to plug audio device into the jacks on the rear and front panel first before enable the multi-stream function.*

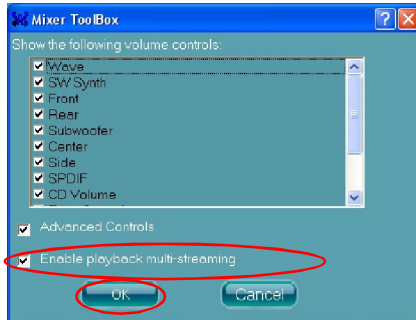


When you are playing the first audio source (for example: use Windows Media Player to play DVD/VCD), the output will be played from the rear panel, which is the default setting.

Then you **must** to select the **Realtek HD Audio front output** from the scroll list **first**, and use a different program to play the second audio source (for example: use Winamp to play MP3 files). You will find that the second audio source (MP3 music) will come out from the Line-Out audio jack of Front Panel.



### 3. Playback control

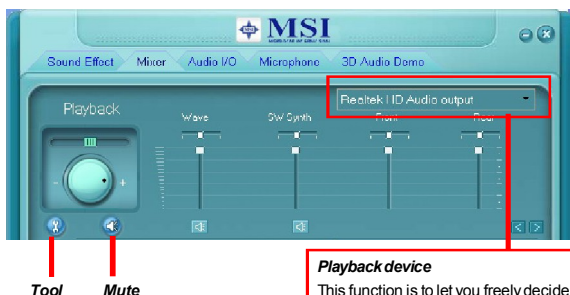

#### Playback device

This function is to let you freely decide which ports to output the sound. And this is essential when multi-streaming playback enabled.

- Realtek HD Audio Rear Output
- Realtek HD Audio Front Output

#### Mute

You may choose to mute single or multiple volume controls or to completely mute sound output.


#### Tool

- Show the following volume controls


This is to let you freely decide which volume control items to be displayed.

- Advanced controls
- Enable playback multi-streaming

With this function, you will be able to have an audio chat with your friends via headphone (stream 1 from front panel) while still have music (stream 2 from back panel) in play. At any given period, you can have maximum 2 streams operating simultaneously.

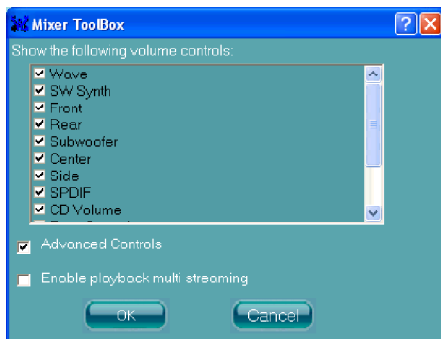

#### 4. Recording control

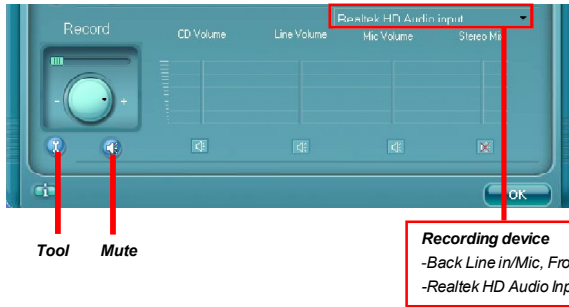

##### Mute


You may choose to mute single or multiple volume controls or to completely mute sound input.

##### Tool

- Show the following volume controls

This is to let you freely decide which volume control items to be displayed.

- Enable recording multi-streaming

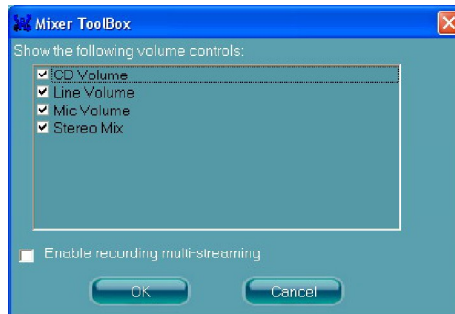

### Important

*ALC888 allows you to record the CD, Line, Mic and Stereo Mix channels simultaneously, frees you from mixing efforts. At any given period, you may choose 1 of the following 4 channels to record.*

## Audio I/O

In this tab, you can easily configure your multi-channel audio function and speakers. You can choose a desired multi-channel operation here.

- a. **Headphone** for the common headphone
- b. **2CH Speaker** for Stereo-Speaker Output
- c. **4CH Speaker** for 4-Speaker Output
- d. **6CH Speaker** for 5.1-Speaker Output
- e. **8CH Speaker** for 7.1-Speaker Output




### Speaker Configuration:

1. Plug the speakers in the corresponding jack.
2. Dialogue "connected device" will pop up for your selection. Please select the device you have plugged in.
  - If the device is being plugged into the correct jack, you will be able to find the icon beside the jack changed to the one that is same as your device.
  - If not correct, Realtek HD Audio Manager will guide you to plug the device into the correct jack.



## Connector Settings

Click  to access connector settings.



### **Disable front panel jack detection (option)**

Find no function on front panel jacks? Please check if front jacks on your system are so-called AC'97 jacks. If so, please check this item to disable front panel jack detection.


### **Mute rear panel output when front headphone plugged in.**

### **Enable auto popup dialogue, when device has been plugged in**

Once this item checked, the dialog "Connected device" would automatically pop up when device plugged in.

**S/PDIF**

Short for Sony/Philips Digital Interface, a standard audio file transfer format. S/PDIF allows the transfer of digital audio signals from one device to another without having to be converted first to an analog format. Maintaining the viability of a digital signal prevents the quality of the signal from degrading when it is converted to analog.

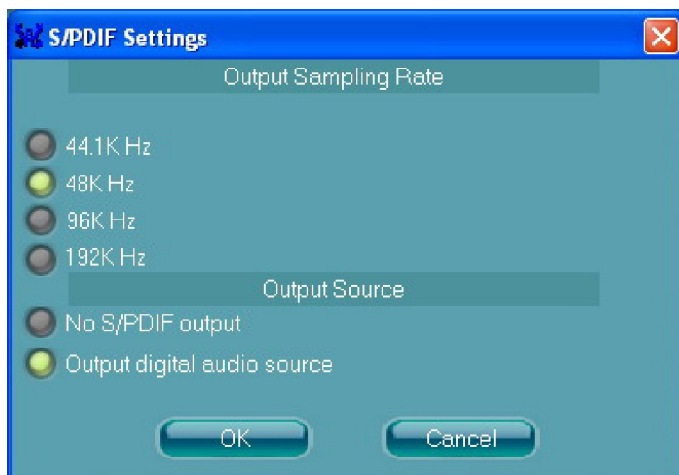**Output Sampling Rate**

44.1KHz: This is recommend while playing CD.

48KHz: This is recommended while playing DVD or Dolby.

96KHz: This is recommended while playing DVD-Audio.


192KHz: This is recommended while playing High quality Audio.


**Output Source**

Output digital audio source: The digital audio format (such as .wav, .mp3,.midi etc) will come out through S/PDIF-Out.

S/PDIF-in to S/PDIF -out pass though mode: The data from S/PDIF-In can be real-time played from S/PDIF-Out.

### Test Speakers

You can select the speaker by clicking it to test its functionality. The one you select will light up and make testing sound. If any speaker fails to make sound, then check whether the cable is inserted firmly to the connector or replace the bad speakers with good ones. Or you may click the **auto test**  button to test the sounds of each speaker automatically.

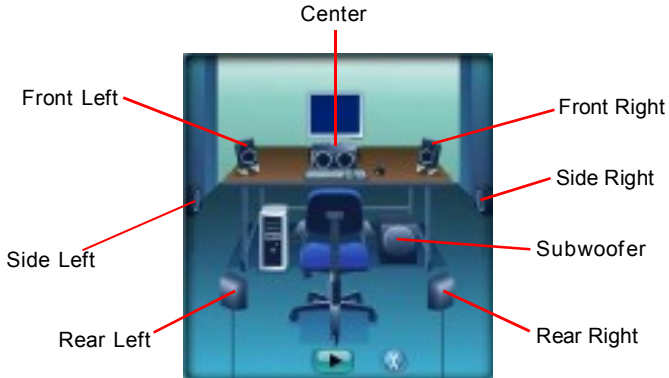

## Microphone

In this tab you may set the function of the microphone. Select the **Noise Suppression** to remove the possible noise during recording, or select **Acoustic Echo Cancellation** to cancel the acoustic echo during recording.

**Acoustic Echo Cancellation** prevents playback sound from being recorded by microphone together with your sound. For example, you might have chance to use VOIP function through Internet with your friends. The voice of your friend will come out from speakers (playback). However, the voice of your friend might also be recorded into your microphone then go back to your friend through Internet. In that case, your friend will hear his/her own voice again. With AEC(Acoustic Echo Cancellation) enabled at your side, your friend can enjoy the benefit with less echo.




### 3D Audio Demo


In this tab you may adjust your 3D positional audio before playing 3D audio applications like gaming. You may also select different environment to choose the most suitable environment you like.



## Information

In this tab it provides some information about this HD Audio Configuration utility, including Audio Driver Version, DirectX Version, Audio Controller & Audio Codec. You may also select the language of this utility by choosing from the **Language** list.

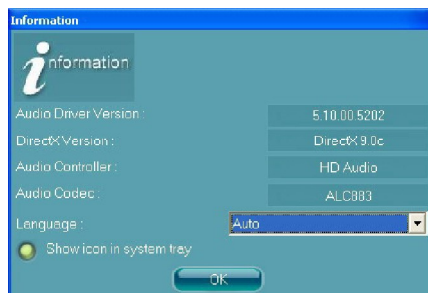

Also there is a selection **Show icon in system tray**. Switch it on and an icon  will show in the system tray. Right-click on the icon and the **Audio Accessories** dialogue box will appear which provides several multimedia features for you to take advantage of.




## Hardware Setup

### Connecting the Speakers

When you have set the Multi-Channel Audio Function mode properly in the software utility, connect your speakers to the correct phone jacks in accordance with the setting in software utility.


#### **n 2-Channel Mode for Stereo-Speaker Output**

Refer to the following diagram and caption for the function of each phone jack on the back panel when 2-Channel Mode is selected.

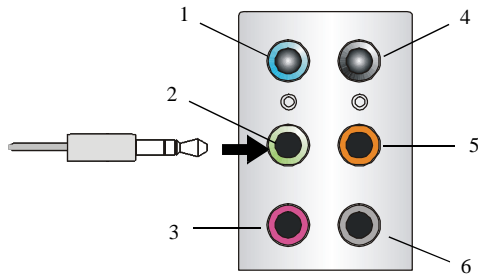

- 1 Line In
- 2 Line Out (*Front channels*)
- 3 MC
- 4 No function
- 5 No function
- 6 No function

## n 4-Channel Mode for 4-Speaker Output

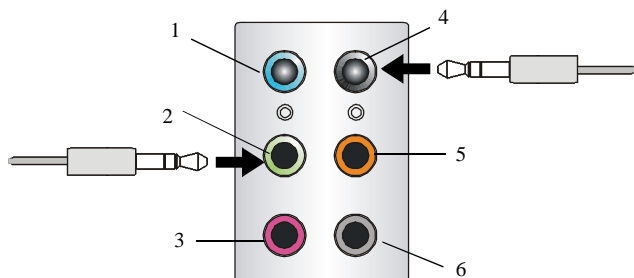


### 4-Channel Analog Audio Output

- 1 Line In
- 2 Line Out (*Front channels*)
- 3 MIC
- 4 Line Out (*Rear channels*)
- 5 No function
- 6 No function




## n 6-Channel Mode for 6-Speaker Output

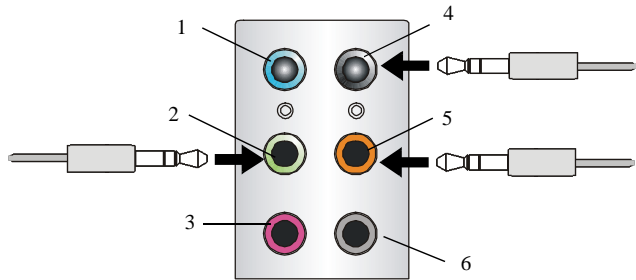

## 6-Channel Analog Audio Output

- 1 Line In
- 2 Line Out (*Front channels*)
- 3 MIC
- 4 Line Out (*Rear channels*)
- 5 Line Out (*Center and Subwoofer channel*)
- 6 No function

## n 8-Channel Mode for 8-Speaker Output

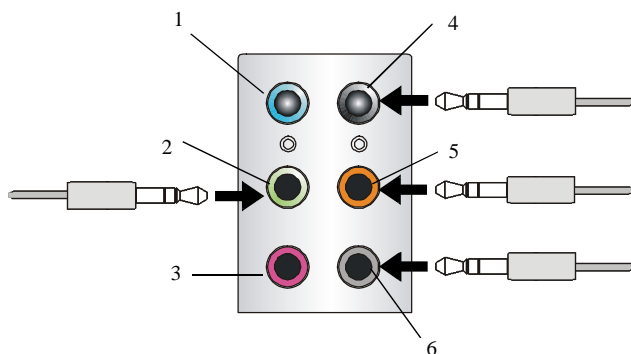

## 8-Channel Analog Audio Output

- 1 Line In
- 2 Line Out (*Front channels*)
- 3 MIC
- 4 Line Out (*Rear channels*)
- 5 Line Out (*Center and Subwoofer channel*)
- 6 Line Out (*Side channels*)



### Important

To enable 7.1 channel audio-out function on Vista operating system, you have to install the Realtek Audio Driver. Or, the mainboard will support 5.1 channel audio-out only.

## *Appendix B*

### *Dual Core Center*

Dual CoreCenter, the most useful and powerful utility that MSI has spent much research and efforts to develop, helps users to monitor or configure the hardware status of MSI Mainboard & MSI Graphics card in windows, such as CPU/GPU clock, voltage, fan speed and temperature.

Before you install the Dual CoreCenter, please make sure the system has meet the following requirements:


1. Intel Pentium4 / Celeron, AMD Athlon XP/ Sempron or compatible CPU with PCI Express slot.
2. 256MB system memory.
3. CD-ROM drive for software installation.
4. Operation system: Windows XP.
5. DotNet Frame Work 2.0

## Activating Dual Core Center

Once you have your Dual Core Center installed (locate the setup source file in the setup CD accompanying with your mainboard, path: **Utility --> MSI Utility --> Dual Core Center**), it will have an icon  in the system tray, a short cut icon on the desktop, and a short cut path in your "Start-up" menu. You may double-click on each icon to enable Dual Core Center.



short-cut icon in the system tray

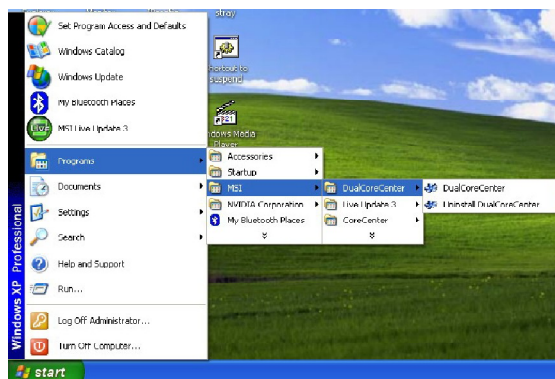

short-cut path in the start-up menu  
(path: Start-->Programs-->MSI-->  
DualCoreCenter-->DualCoreCenter)

## Main

Before using this utility, we have to remind you: only when installing the MSI V044 (V044 has to install with the version 8.26 or newer driver)/ V046 or V060 graphics card can activate the full function of this utility. If you install a graphics card of other brand, only hardware status of the MSI mainboard would be available.



### Introduction:

Click each button appearing above to enter sub-menu to make further configuration or to execute the function.

#### MB

Click MB button to read current CPU temperature, FSB and CPU clock of mainboard will show below.

#### VGA

Click VGA button to read current GPU temperature, GPU clock and memory clock of graphics card will show below.

#### DOT

Click DOT button to enable or disable the Dynamic Overclocking Technology.

### AV/ Game/ Office/ Silence/ Cool

MSI provides five common settings for different environments. The settings had been set to optimal values to reach better performance in each environment. Click the button you need.



### Important

Before clicking the AV/ Game/ Office/ Silence or Cool button, select Smooth mode or Sharp mode to decide whether you want the system to reach the optimal values smoothly or quickly.

**Sharp mode**



**Smooth mode**

### Clock



In this sub-menu, you can adjust and monitor the clocks of MB and graphics card.

### Voltage



In this sub-menu, you can adjust and monitor the voltages of MB and graphics card.

### FAN Speed



In this sub-menu, you can adjust and monitor the fan speeds of MB and graphics card.

### Temperature



In this sub-menu, you can monitor the temperatures of MB and graphics card.

### User Profile

In this sub-menu, you can set the values of clock, voltage and fan speed by your need and save them in a profile. You can save 3 profiles for further use.






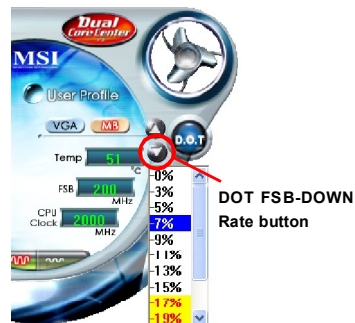
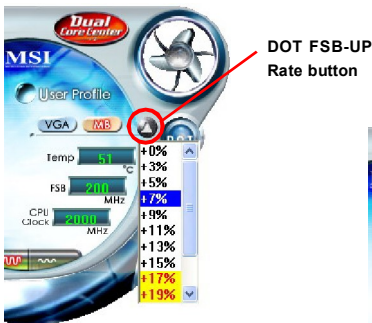
### Important

Click on the icon , the clock, voltage, fan, and temperature buttons will appear beside the icon.



## DOT (Dynamic OverClocking)




Dynamic Overclocking Technology is an automatic overclocking function, included in the MSI™'s newly developed Dual CoreCenter Technology. It is designed to detect the loading of CPU/ GPU while running programs, and to over-clock automatically. When the motherboard detects that the loading of CPU is exceed the default threshold for a time, it will speed up the CPU and fan automatically to make the system run smoother and faster. When the graphics card detects that the loading of GPU is exceed the default threshold for a time, it will speed up the GPU, memory, fan and voltage automatically to make the system run smoother and faster. When the CPU/ GPU is temporarily suspending or staying in low loading balance, it will restore the default settings instead. Usually the Dynamic Overclocking Technology will be powered only when users' PC runs huge amount of data, like 3D games or video process, and the motherboard/ graphicd card need to be boosted up to enhance the overall performance. There will be several selections when you click the DOT rate button (include increase rate  and decrease rate  rate buttons), to select the DOT level, then you have to click the DOT button  to apply the DOT function.




### Important

*Even though the Dynamic Overclocking Technology is more stable than manual overclocking, basically, it is still risky. We suggest user to make sure that your CPU can afford to overclock regularly first. If you find the PC appears to be unstable or reboot incidentally, it's better to lower the level of overclocking options. By the way, if you need to conduct overclocking manually, please do not to apply the DOT function.*

## Clock

In the **Clock** sub-menu, you can see clock status (including FSB/ CPU clock of mainboard and GPU/ memory clock of graphics card) of your system. And you can select desired value for overclocking. There will be several items for you to select for overclocking after you click  button. You can click the plus sign button  to increase the clock, or click the minus sign button  to decrease the clock. And finally, click the Apply button to apply the values adjusted. If you do not want to apply the adjustments, click the Cancel button to cancel. Or click the Default button to restore the default values.

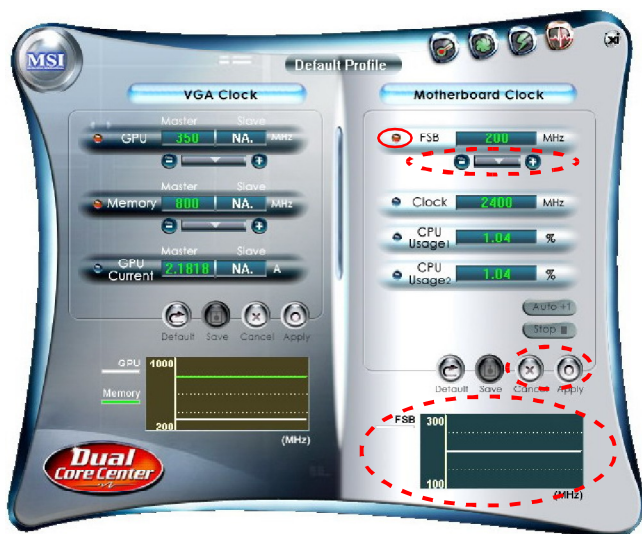

On the underside, it shows the graphs of the clocks. Only the curves of the item which the button is lit up with red color will be shown.






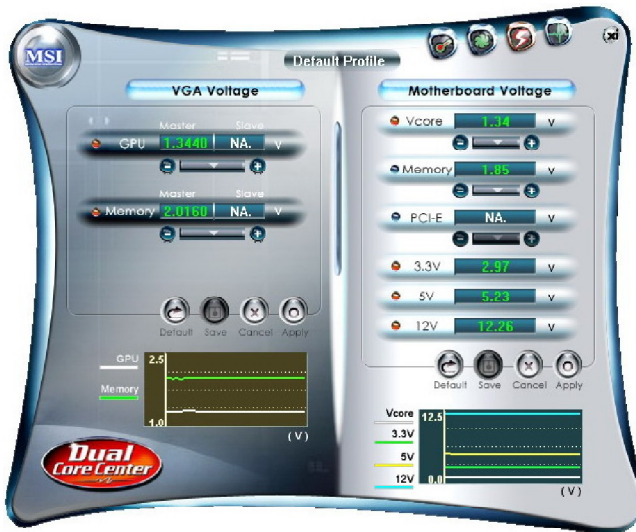
### Important

*In the user profile, clicking the **Save** button can save the changes to it. In the default profile, the Save button is not available.*



## Voltage

In the **Voltage** sub-menu, you can see voltage status (including Vcore, memory, GPU voltage... etc.) of your system, and you can select desired value for overclocking. It will show several items to select for overclocking after you click the  button. You can click the plus sign button  to increase the voltage, or click the minus sign button  to decrease. And finally, click the Apply button to apply the adjustments. If you do not want to apply the adjustments, click the Cancel button to cancel. Or click the Default button to restore the default values.






On the underside, it shows the graphs of the voltages. Only the curves of the item which the button is lit up with red color will be shown.




### Important

*In the user profile, clicking the **Save** button can save the changes to it. In the default profile, the Save button is not available.*

## FAN Speed

In the **FAN Speed** sub-menu, you can read fan status of your system. Select higher speed for better cooling effect. There are several sections for you to change the fan speed to a section after clicking  button. Click the plus sign button  to increase the fan speed to a section, or click the minus sign button  to decrease. Or click the Default button to restore the default values.

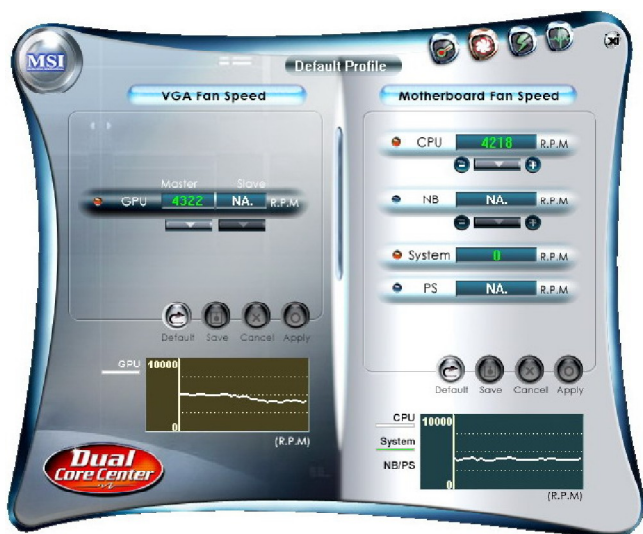

On the underside, it shows the graphs of the fan speed. Only the curves of the item which the button is lit up with red color will be shown.




### Important

1. When you set the fan speed manually, please make sure to disabled the "CPU Smart FAN Target" item in the BIOS.
2. In the user profile, clicking the **Save** button can save the changes to it. In the default profile, the Save button is not available.

## Temperature


In the **Temperature** sub-menu, you can see temperature status of your system.

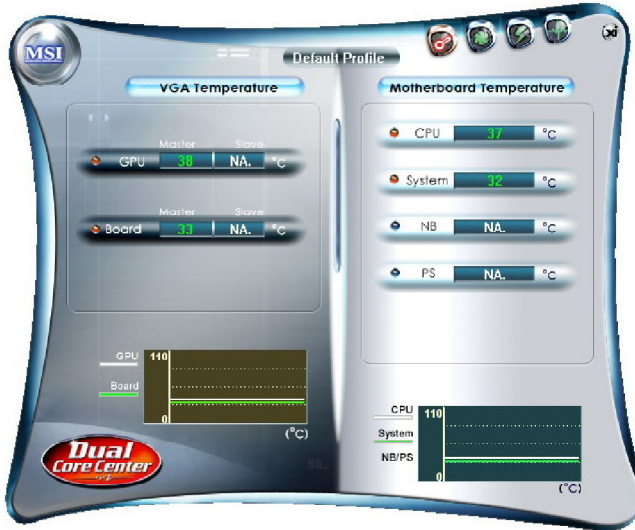




On the underside, it shows the graphs of the temperatures. Only the curves of the item which the button is lit up with red color will be shown.

## User Profile

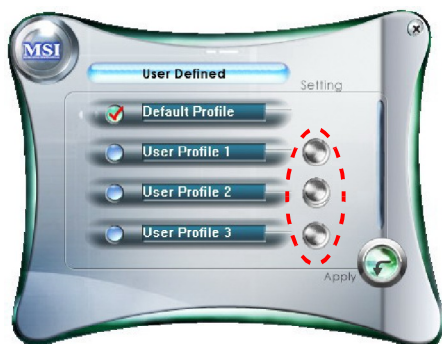In the **User Profile** sub-menu, click the setting button that besides the user profile bar, and the next screen will appear.




Here you can define the clock/ fan speed/ voltage by your need, click the  button to choose a value quickly, or click the plus  / minus sign  button to increase/ decrease the value.




Use the draw bar to set the max system temperature. When the system temperature exceeds the threshold you defined, the system will pop up a warning message and shut down the system.

Use the draw bar to set the minimal fan speed. When the fan speed is lower than the threshold you defined, the system will pop up a warning message.



After setting all values you need, you can change the user profile name in the box then click the save button  to save all changes in a profile.



Finally, you can choose the user profile by click the button in the left side and click the Apply button to load the user profile.

